
 


3 611 B73 020


Issue } 17-12-12 **Fig./Abb. 1**
Stand }

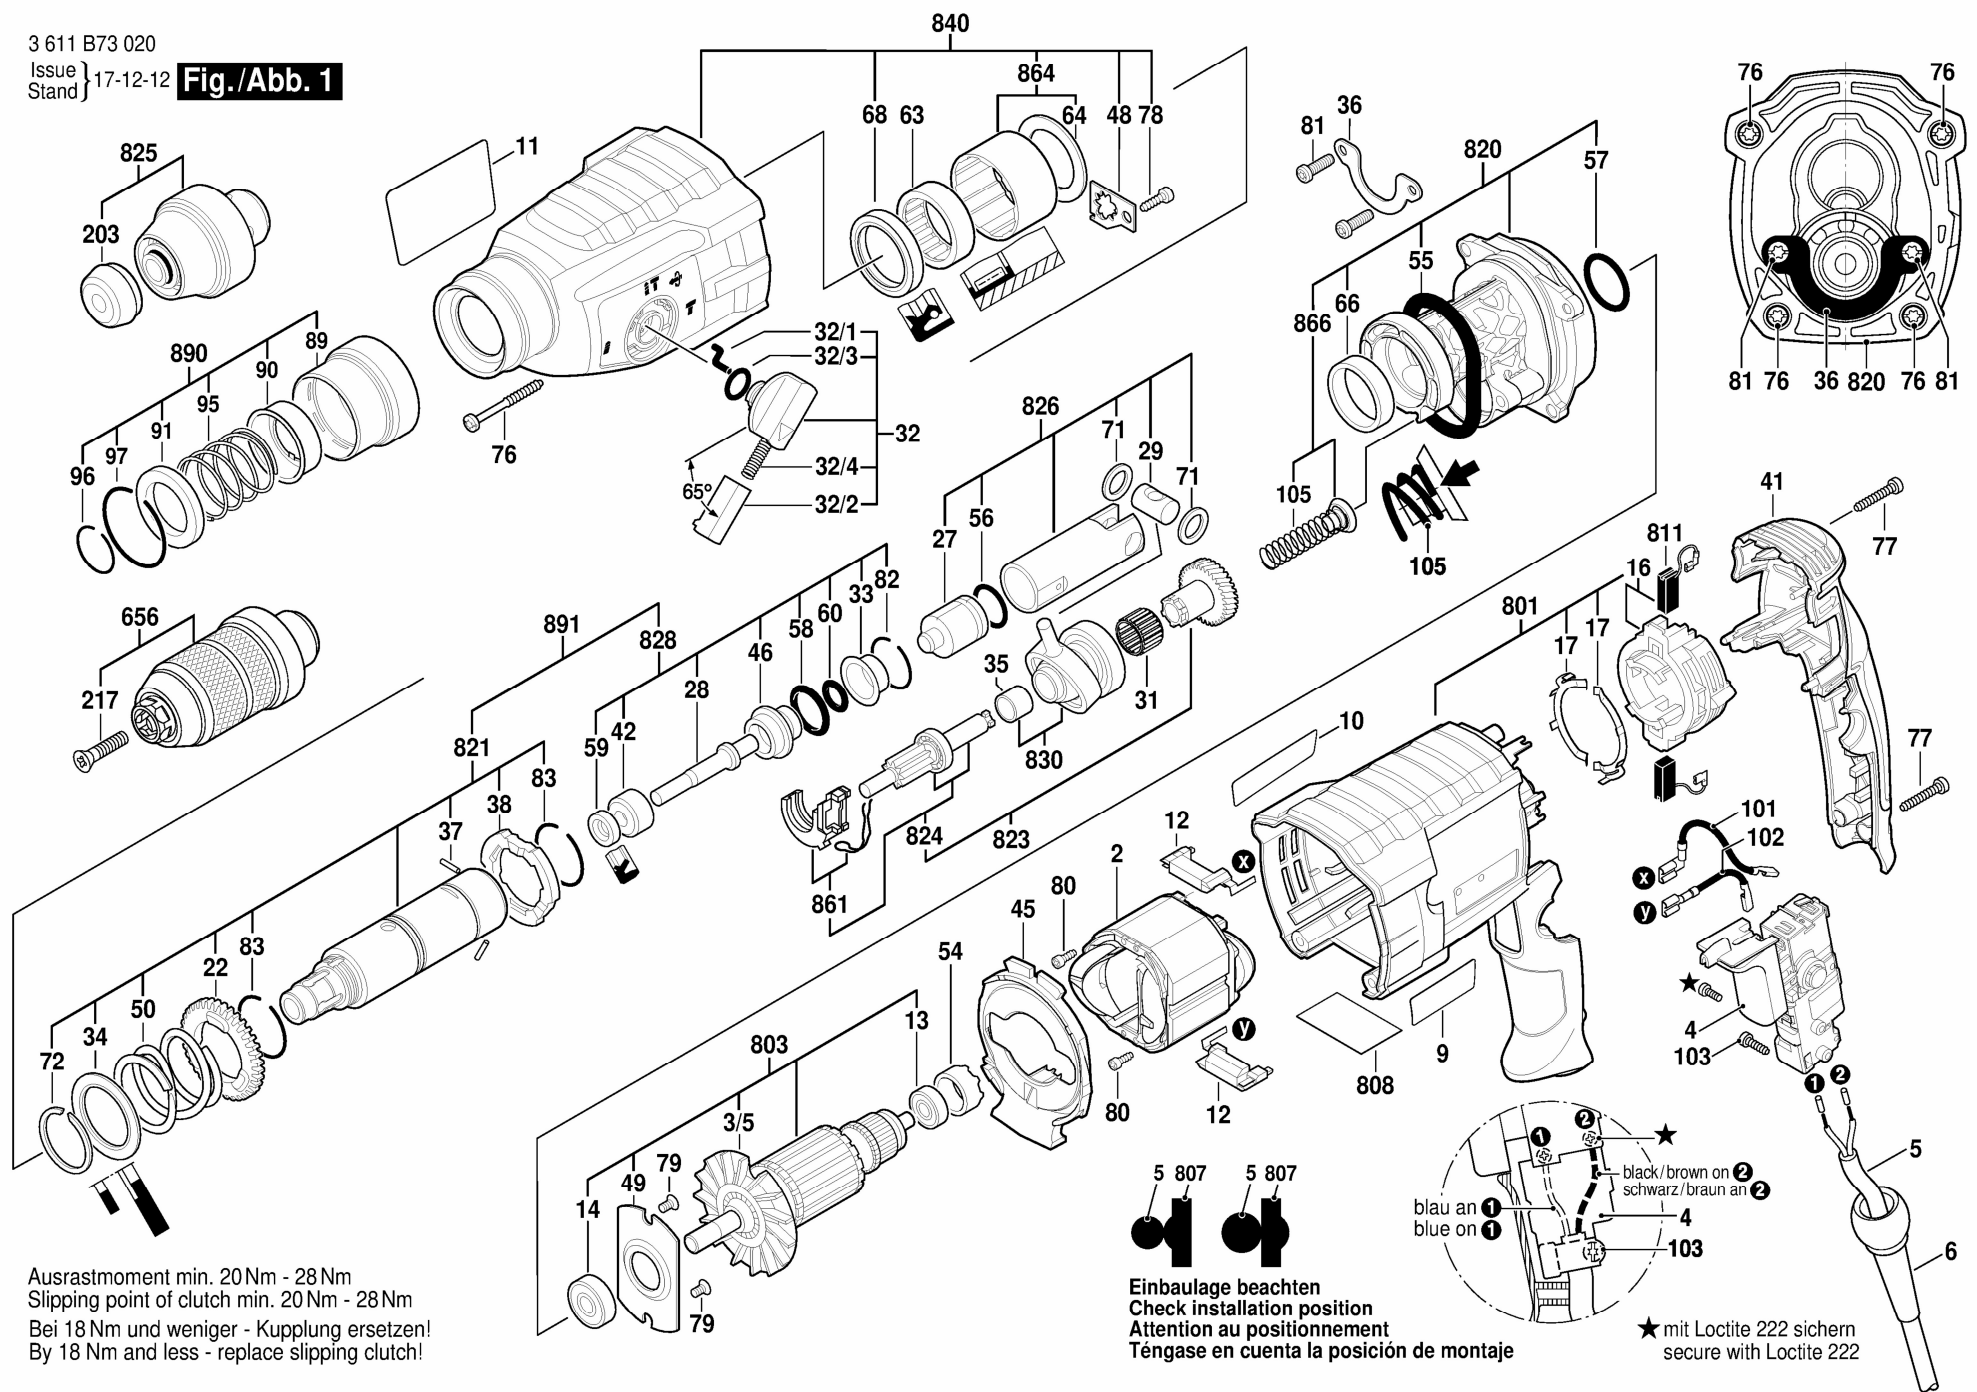

Austrastmoment min. 20 Nm - 28 Nm
Slipping point of clutch min. 20 Nm - 28 Nm
Bei 18 Nm und weniger - Kupplung ersetzen!
By 18 Nm and less - replace slipping clutch!



Einbaulage beachten
Check installation position
Attention au positionnement
Téngase en cuenta la posición de montaje

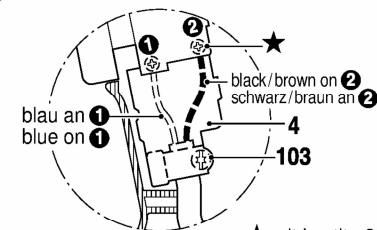

★ mit Loctite 222 sichern
secure with Loctite 222