


FS 240

Spare Parts List
04/24/2025
Romania, English

Contents

A - Crankcase, Cylinder FS 240	2
C - Crankcase, Cylinder	4
E - Rewind starter	6
F - Muffler, Shroud	8
G - Fuel tank	10
H - Fuel tank	12
I - Spacer flange, Air filter	14
J - Spacer flange, Air filter	16
K - Carburetor 4147/24, 4147/25	18
L - Carburetor WTF-10, WTF-11, WTF-5, WTF-6	21
N - Ignition system	23
M - Ignition system	25
O - Clutch, Clutch housing	27
P - Drive tube assembly	29
S - Bike handle FS 240	31
U - Handlebar support	33
V - Gear head	35
W - Gear head (23.2015)	37
Y - Deflector	39
Z - Shredder deflector, Limit stop	41
AA - Tools, Full harness	43
AB - Serial number	46


A - Crankcase, Cylinder FS 240

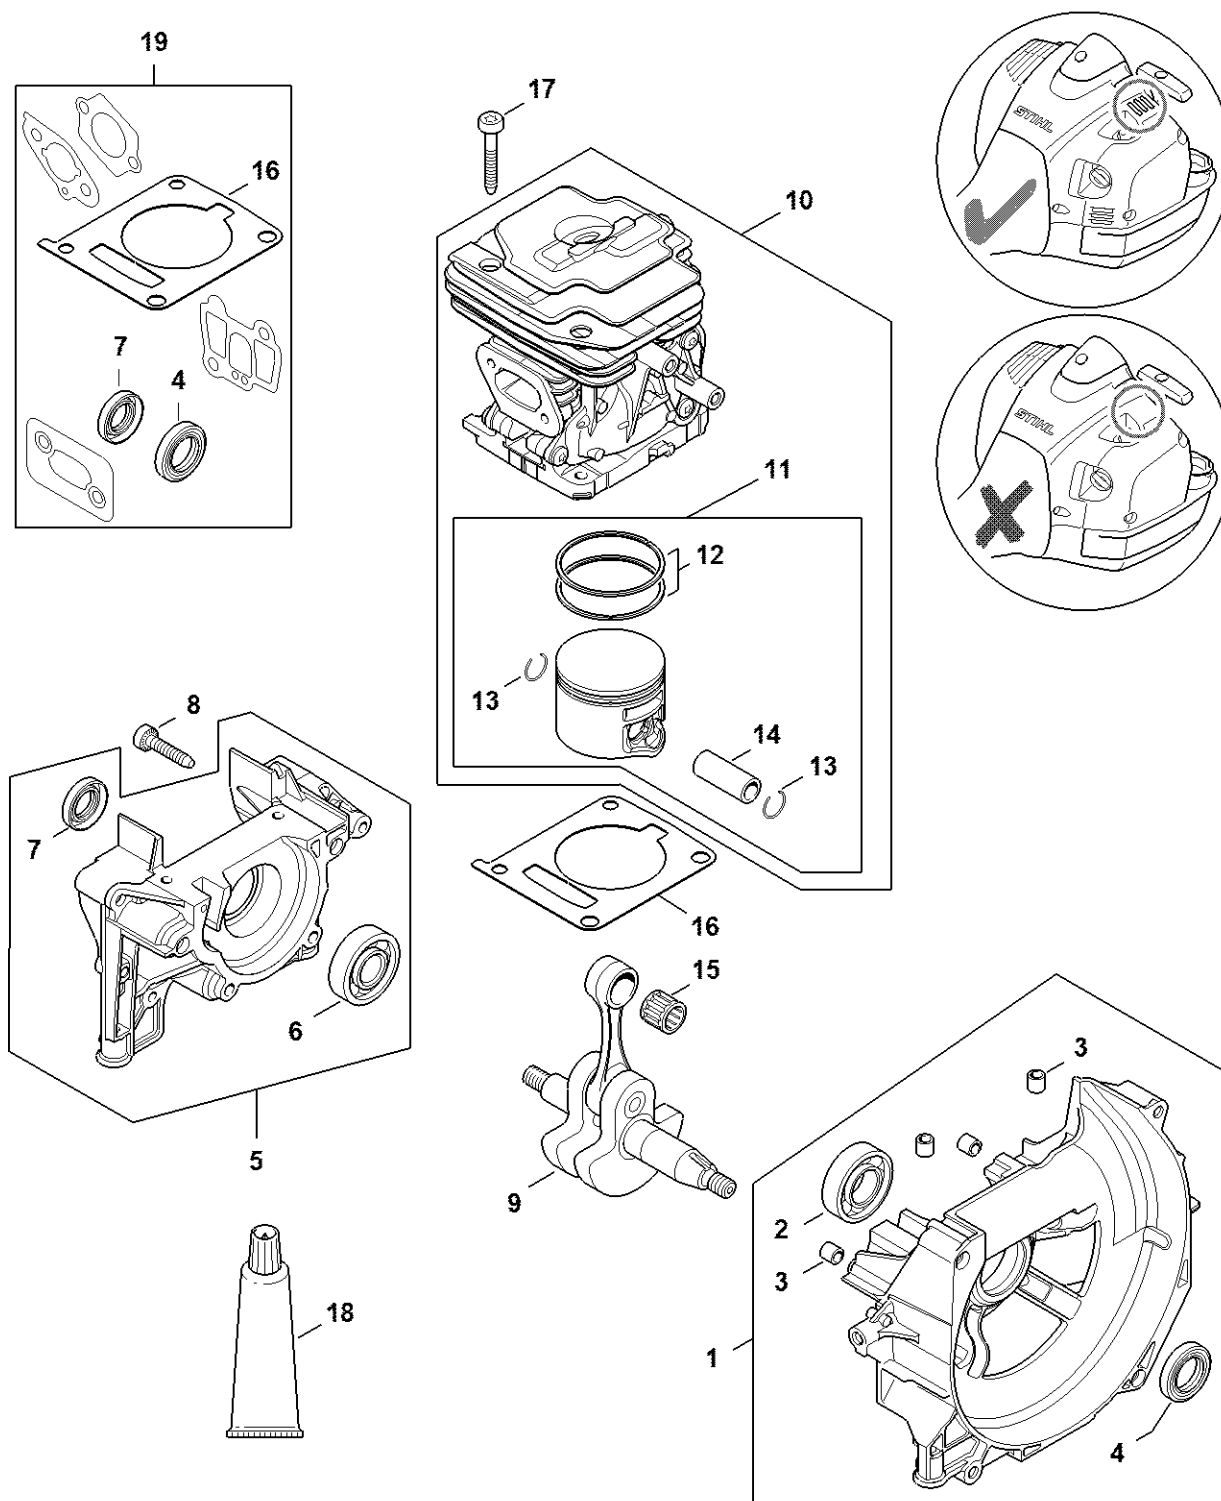

A - Crankcase, Cylinder FS 240

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
1	4147 020 2609	Crankcase, fan side	1	2 - 4	
2	9503 003 0310	Grooved ball bearing 6002	1		
3	0000 988 8600	Sleeve	4		
4	9639 003 1585	Oil seal 15x25x5	1		
5	4147 020 2904	Crankcase	1	6, 7	
6	9503 003 0242	Grooved ball bearing 6201	1		
7	9640 003 1195	Oil seal 12x22x5	1		
8	9075 478 4159	Pan head self-tapping screw IS-D5x24	4		Binding thread
9	4147 030 0403	Crankshaft	1		
10	4147 020 1206	Cylinder with piston Ø 40 mm	1	11 - 14	
11	4147 030 2003	Piston Ø 40 mm	1	12 - 14	
12	4147 034 3003	Piston ring Ø 40x1.2 mm	2		
13	9463 650 1100	Snap ring 11	2		
14	4147 034 1500	Piston pin 11x7x24	1		
15	9512 003 2349	Needle cage 11x14x12,5	1		
16	4147 029 2300	Cylinder gasket	1		
17	9075 478 4167	Pan head self-tapping screw IS-D5x32	4		Binding thread
18	0783 830 2000	Sealant, Dirko HT red	1		
19	4147 007 1602	Set of gaskets	1	4, 7, 16	

C - Crankcase, Cylinder

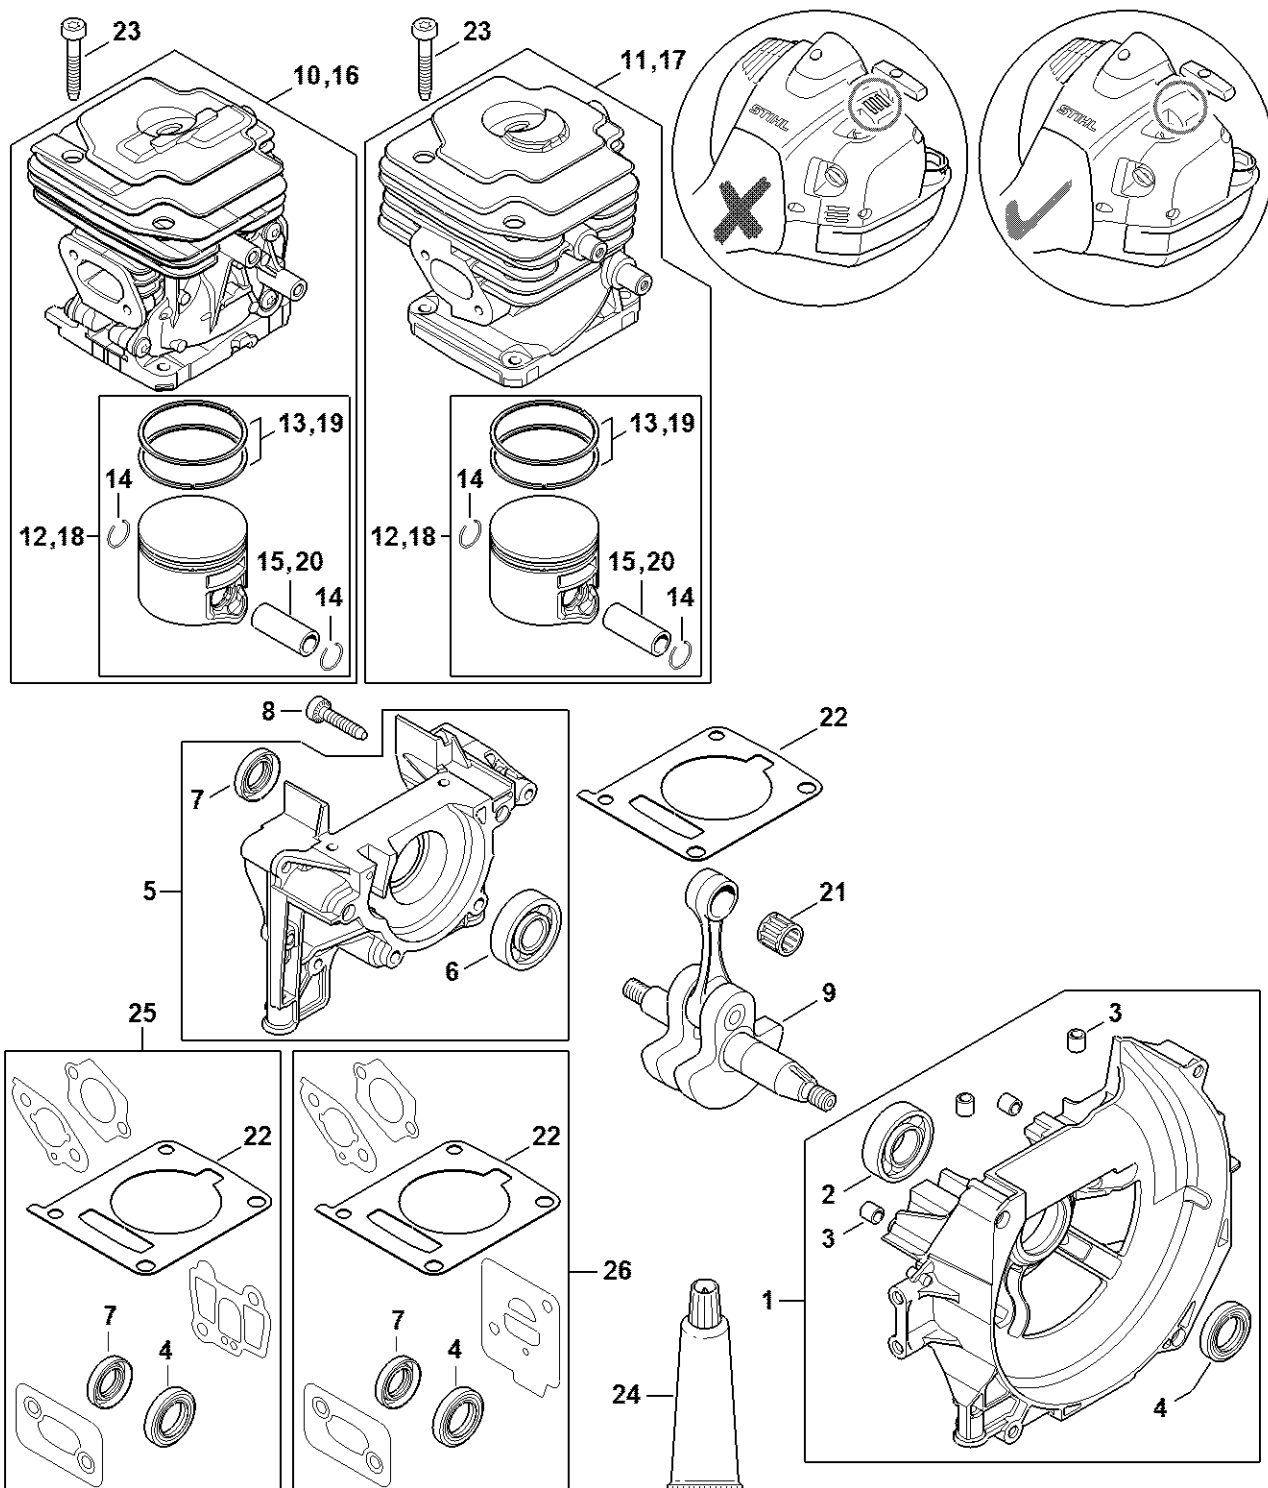

C - Crankcase, Cylinder

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
1	4147 020 2602	Crankcase, fan side	1	2 - 4	
2	9503 003 0310	Grooved ball bearing 6002	1		
3	0000 988 8600	Sleeve	4		
4	9639 003 1585	Oil seal 15x25x5	1		
5	4147 020 2904	Crankcase	1	6, 7	
6	9503 003 0242	Grooved ball bearing 6201	1		
7	9640 003 1195	Oil seal 12x22x5	1		
8	9075 478 4159	Pan head self-tapping screw IS-D5x24	4		Binding thread
9	4147 030 0403	Crankshaft	1		
10	4147 020 1206	Cylinder with piston Ø 40 mm	1	12 - 15	
12	4147 030 2003	Piston Ø 40 mm	1	13 - 15	
13	4147 034 3003	Piston ring Ø 40x1.2 mm	2		
14	9463 650 1100	Snap ring 11	2		
15	4147 034 1500	Piston pin 11x7x24	1		
21	9512 003 2349	Needle cage 11x14x12,5	1		
22	4147 029 2300	Cylinder gasket	1		
23	9075 478 4167	Pan head self-tapping screw IS-D5x32	4		Binding thread
24	0783 830 2000	Sealant, Dirko HT red	1		
25	4147 007 1602	Set of gaskets	1	4, 7, 22	


E - Rewind starter



E - Rewind starter

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
1	4147 190 4003	Rewind starter	1	2 - 11	
2	4147 190 0404	Starter cover	1	3	
3	1110 084 9102	Bushing	1		
4	1121 195 3400	Starter grip	1		
5	4147 195 8200	Starter rope Ø 3x1010 mm	1		
6	4147 190 0600	Rewind spring	1		
7	9104 003 0410	Self-tapping screw P3x6	2		
8	4147 195 0401	Rope rotor	1		
9	4116 195 7200	Pawl	1		
10	0000 958 0806	Washer	1		
11	1118 195 3500	Spring	1		
12	0000 930 2298	Starter rope Ø 3 mm x 30.5 m	1		
13	4147 967 1549	Model plate FS 240	1		
17	9075 478 4159	Pan head self-tapping screw IS-D5x24	4		Binding thread
18	4147 195 0600	Starter cup	1		
19	0000 955 0802	Collar nut M8x1	1		
20	4147 007 1013	Cover plate kit	1	21 - 23	
21	4147 195 5400	Cover	1		
22	9074 478 3005	Pan head self-tapping screw IS-P4x14	2		
23	4147 140 4400	Air filter	1		
24	4147 007 1800	Service kit	1	4, 5, 8 - 11	

F - Muffler, Shroud

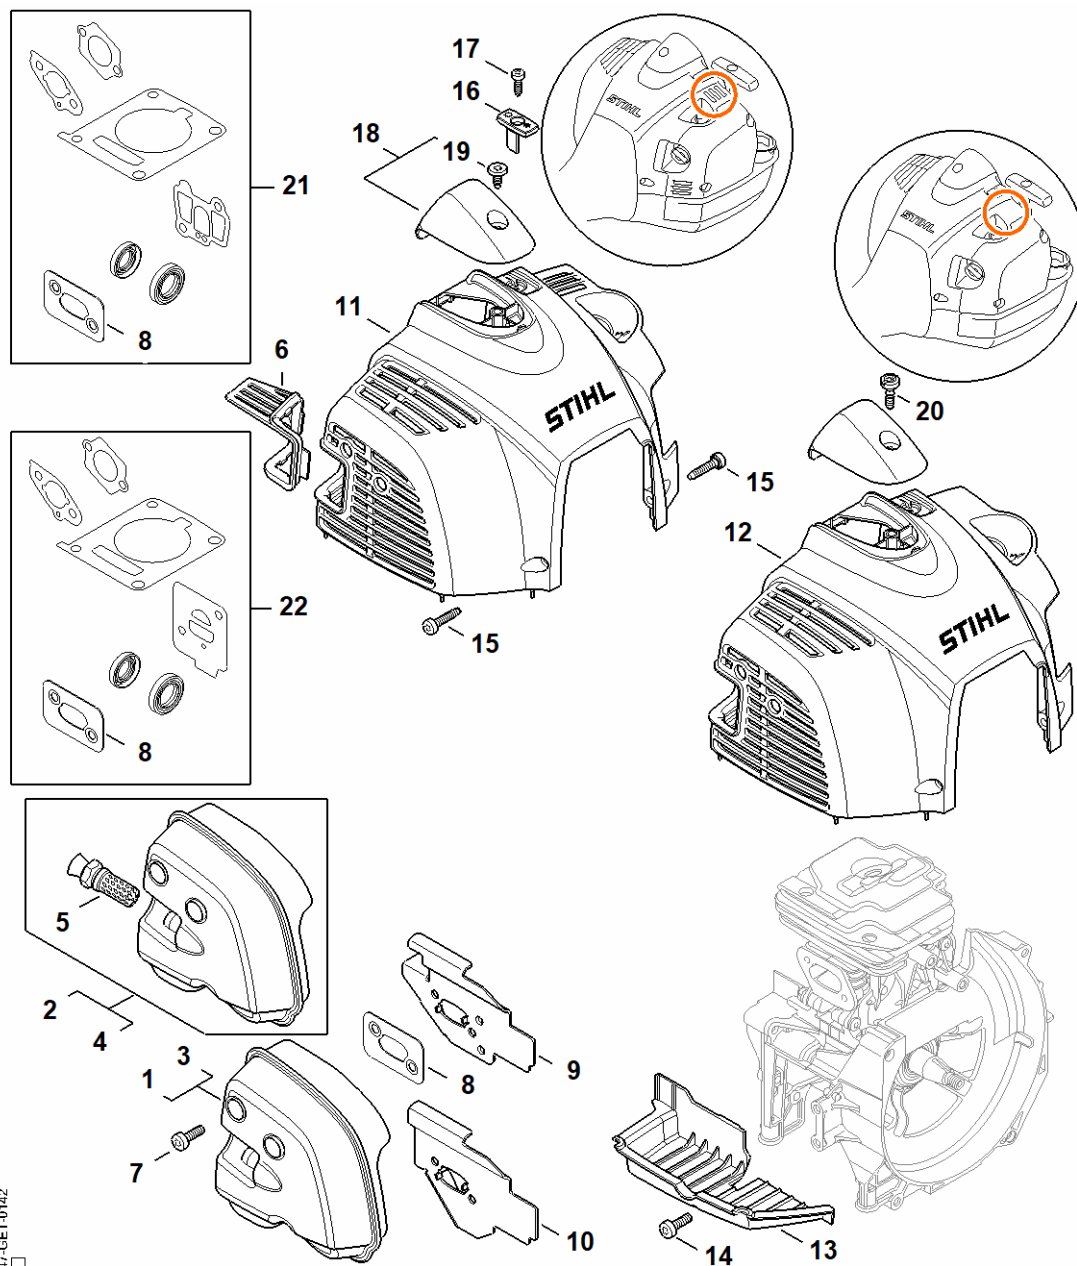


4147-GET-0142
KO

F - Muffler, Shroud

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
1	4147 140 0601	Muffler	1		
7	9022 341 0983	Spline screw IS-M5x16	3		Micro-encapsulated with binding thread
8	4147 149 0601	Muffler gasket	1		
9	4147 141 3201	Cooling plate	1		
11	4147 080 1613	Shroud	1		
12	4147 080 1600	Shroud	1		
13	4147 020 4000	Insert	1		
14	9022 341 0983	Spline screw IS-M5x16	1		Micro-encapsulated with binding thread
15	9075 478 4159	Pan head self-tapping screw IS-D5x24	2		Binding thread
16	4147 084 4102	Shutter	1		
17	9074 478 3005	Pan head self-tapping screw IS-P4x14	1		
18	4147 080 0401	Cover	1	19	
19	0000 951 1114	Screw M5x12	1		
20	9022 319 0981	Screw IS-M5x17	1		
21	4147 007 1602	Set of gaskets	1	8	
22	4147 007 1601	Set of gaskets	1	8	

G - Fuel tank

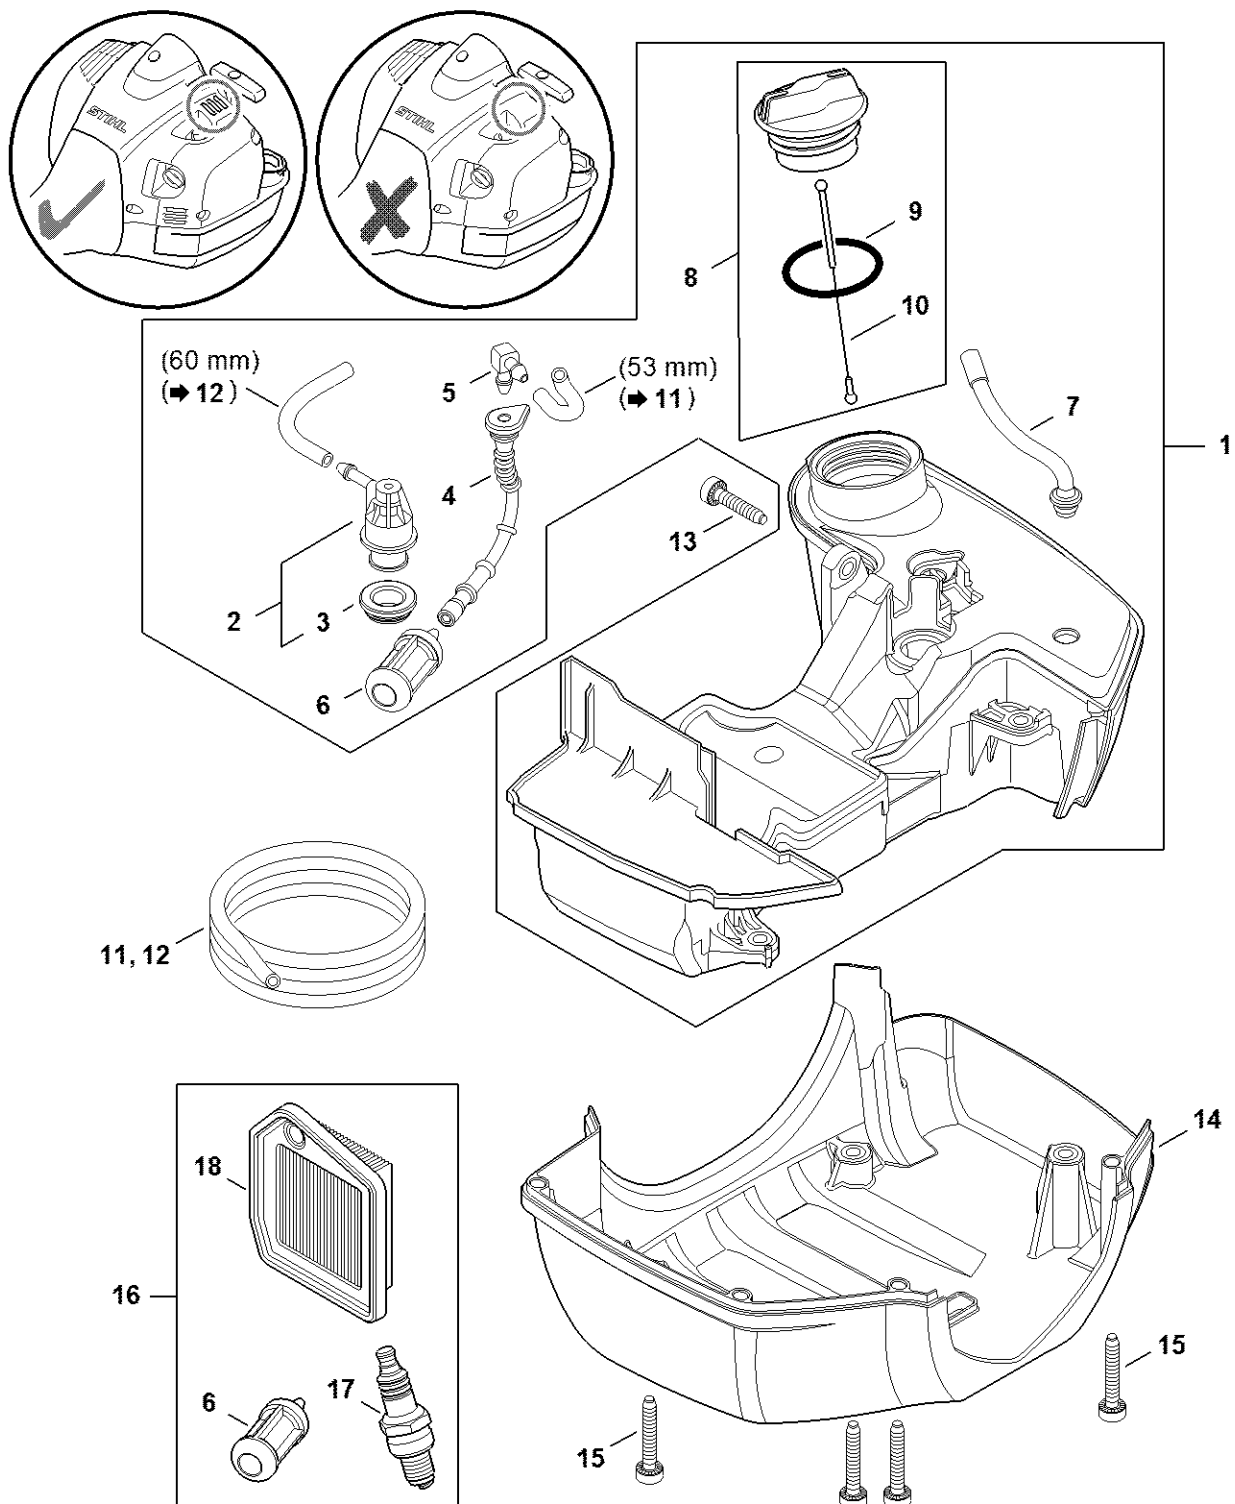

4147-GET-0158-A0

G - Fuel tank

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
1	4147 350 0408	Fuel tank	1	2 - 10	
2	0000 350 5812	Tank vent	1		
3	4223 353 9201	Grommet	1		
4	4147 358 0800	Hose	1		
5	4224 122 3900	Elbow connector	1		
6	0000 350 3521	Pickup body	1		
7	4147 358 0803	Hose	1		
8	0000 350 0527	Filler cap	1	9, 10	
9	9645 951 3890	O-ring 35x3-FPM 80	1		
10	0000 350 0900	Rope	1		
11	0000 937 5004	Hose 3.1x5.7 mm x 1 m, R5	1		
12	0000 930 2803	Hose 3.1x5.7 mm x 1 m, R3	1		
12	0712 923 8004	Hose 3.1x5.7 mm x 10 m, R3	1		
13	9075 478 4159	Pan head self-tapping screw IS-D5x24	1		Binding thread
14	4147 350 6600	Guard plate	1		
15	9075 478 4167	Pan head self-tapping screw IS-D5x32	4		Binding thread
16	4147 007 4102	Servicing kit 41	1	6, 17, 18	
17	0000 400 7011	Spark plug NGK CMR6H	1		
18	4147 141 0300	Air filter	1		

H - Fuel tank



H - Fuel tank

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
1	4147 350 0404	Fuel tank	1	2 - 10	
2	0000 350 5812	Tank vent	1	3	
3	4223 353 9201	Grommet	1		
4	4224 122 3900	Elbow connector	1		
5	4147 358 0803	Hose	1		
6	4147 358 0800	Hose	1		
7	0000 350 3521	Pickup body	1		
8	0000 350 0527	Filler cap	1	9, 10	
9	9645 951 3890	O-ring 35x3-FPM 80	1		
10	0000 350 0900	Rope	1		
11	0000 937 5004	Hose 3.1x5.7 mm x 1 m, R5	1		
12	0000 930 2803	Hose 3.1x5.7 mm x 1 m, R3	1		
12	0712 923 8004	Hose 3.1x5.7 mm x 10 m, R3	1		
16	9645 951 7735	O-ring N25x3,5-FPM75	1		
17	9075 478 4159	Pan head self-tapping screw IS-D5x24	1		Binding thread
18	4147 350 6600	Guard plate	1		
19	9075 478 4167	Pan head self-tapping screw IS-D5x32	4		Binding thread


I - Spacer flange, Air filter



I - Spacer flange, Air filter

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
1	4147 120 2301	Spacer flange	1		
2	4147 129 0903	Gasket	1		
3	9022 341 1045	Spline screw IS-M5x24	3		micro-encapsulated
4	4147 182 2800	Lever	1		
5	9460 624 0400	E-clip 4	1		
6	4147 182 1500	Throttle rod	1		
7	4147 129 0901	Gasket	1		
8	4147 120 0625	Carburetor 4147/25	1		
10	0000 997 0842	Compression spring	1		
11	4147 182 2803	Lever	1		
12	4147 182 2802	Lever	1		
13	4147 141 9803	Grommet	1		
14	9074 478 3005	Pan head self-tapping screw IS-P4x14	2		
15	4147 129 0902	Gasket	1		
16	4147 140 2802	Filter housing	1	17	
17	4134 123 7500	Grommet	1		
18	9216 261 0700	Hexagon nut M5	2		
19	4147 141 0300	Air filter	1		
20	4147 140 4400	Air filter	1		
21	4147 140 1004	Filter cover	1	23	
23	9022 319 1027	Screw IS-M5x21	2		
25	4147 007 1602	Set of gaskets	1	2, 9, 15	

J - Spacer flange, Air filter

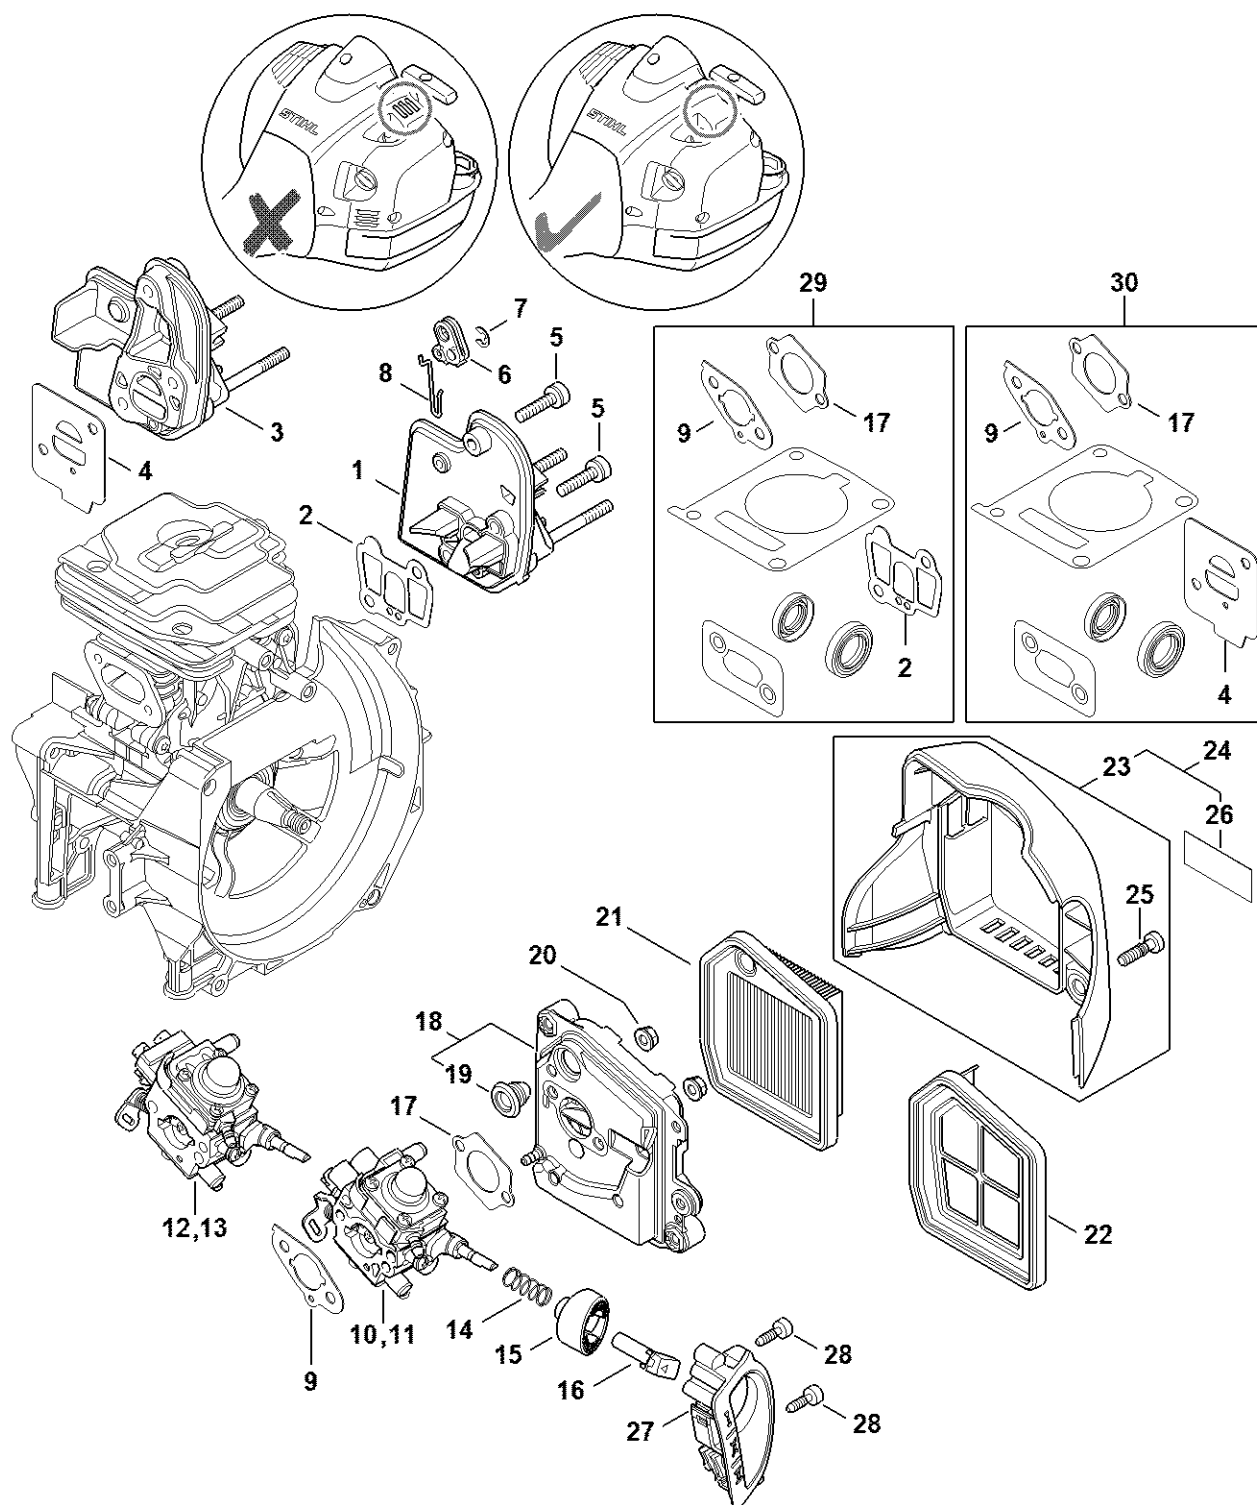


4147-GET-0144-A0

J - Spacer flange, Air filter

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
1	4147 120 2301	Spacer flange	1		
2	4147 129 0903	Gasket	1		
5	9022 341 1045	Spline screw IS-M5x24	3		micro-encapsulated
6	4147 182 2800	Lever	1		
7	9460 624 0400	E-clip 4	1		
8	4147 182 1500	Throttle rod	1		
9	4147 129 0901	Gasket	1		
10	4147 120 0625	Carburetor 4147/25	1		
12	4147 120 0605	Carburetor WTF-10A	1		
14	0000 997 0842	Compression spring	1		
15	4147 182 2803	Lever	1		
16	4147 182 2802	Lever	1		
17	4147 129 0902	Gasket	1		
18	4147 140 2802	Filter housing	1	19	
19	4134 123 7500	Grommet	1		
20	9216 261 0700	Hexagon nut M5	2		
21	4147 141 0300	Air filter	1		
22	4147 140 4400	Air filter	1		
23	4147 140 1000	Filter cover	1	25	
25	9022 319 1027	Screw IS-M5x21	2		
27	4147 141 9803	Grommet	1		
28	9074 478 3005	Pan head self-tapping screw IS-P4x14	2		
29	4147 007 1602	Set of gaskets	1	2, 9, 17	

K - Carburetor 4147/24, 4147/25

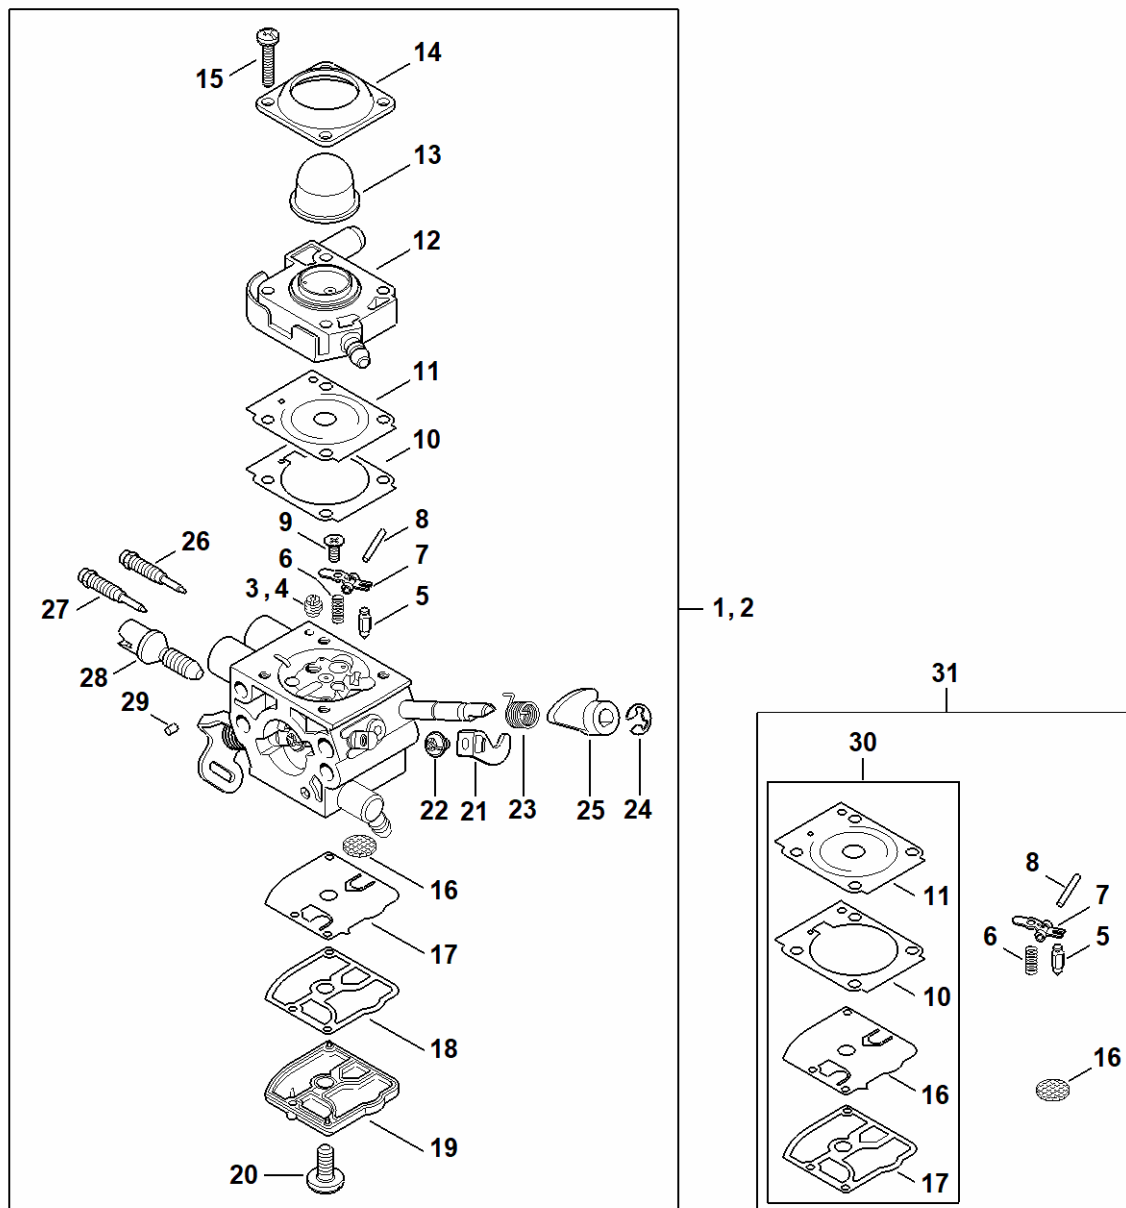

4147-GET-0235
KO

K - Carburetor 4147/24, 4147/25

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
2	4147 120 0625	Carburetor 4147/25	1	4 - 29	
4	4137 121 5601	Fixed jet 0.42	1		
5	Z000 018 Z000	Inlet needle	1		
6	4128 122 3000	Spring	1		
7	4229 121 5000	Inlet control lever	1		
8	1120 121 9200	Spindle	1		
9	0000 122 7101	Screw	1		
10	4147 129 0907	Gasket	1		
11	Z010 015 A006	Metering diaphragm assy	1		
12	Z010 056 A011	Base primer assy	1		
13	4147 121 2702	Cap	1		
14	4147 121 0800	End cover	1		
15	4140 122 7100	Screw	4		
16	1120 121 7800	Strainer	1		
17	1129 121 4800	Pump diaphragm	1		
18	1123 129 0905	Pump gasket	1		
19	1139 121 0800	End cover	1		
20	1120 122 7800	Oval head screw	1		
21	4147 121 3501	Throttle lever	1		
22	4132 122 6600	Collar screw	1		
23	4147 122 3201	Torsion spring	1		
24	4147 122 9001	E-clip	1		
25	4147 121 6605	Lever	1		
26	4147 122 6702	High speed screw	1		
27	4147 122 6802	Low speed screw	1		
28	Z010 035 A000	Idle speed screw assy	1		
29	1125 122 4200	Clamp	1		

K - Carburetor 4147/24, 4147/25

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
30	Z010 003 K008	Gasket & diaphragm kit	1	10, 11, 17, 18	
31	Z010 001 K009	Carburetor Repair Kit RB-274	1	5 - 8, 10, 11, 16 - 18	


L - Carburetor WTF-10, WTF-11, WTF-5, WTF-6



L - Carburetor WTF-10, WTF-11, WTF-5, WTF-6

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
1	4147 120 0605	Carburetor WTF-10A	1	5 - 28, 30	
5	1121 121 5000	Inlet control lever	1		
6	4147 122 3000	Spring	1		
7	4116 121 5100	Inlet needle	1		
8	1113 121 9200	Spindle	1		
9	1121 122 7103	Round head screw	1		
10	4133 129 0901	Gasket	1		
11	4147 121 4700	Metering diaphragm	1		
12	4147 120 2201	Flange	1		
13	4133 121 2700	Cap	1		
14	4133 121 0801	End cover	1		
15	4147 122 7100	Screw	4		
16	1114 121 7800	Strainer	1		
17	1121 121 4801	Pump diaphragm	1		
18	4147 129 0904	Gasket	1		
19	1143 120 2600	Pump cover	1		
20	1114 122 7100	Screw	1		
21	4147 121 3500	Throttle lever	1		
22	1121 122 7102	Round head screw	1		
23	4147 122 3200	Torsion spring	1		
24	1117 122 9000	E-clip	1		
25	4147 122 6200	Idle speed screw	1		
26	1122 121 7700	Clamp	1		
27	4147 122 6700	High speed screw	1		
28	4147 122 6800	Low speed screw	1		
30	4147 121 6602	Lever	1		
32	4147 007 1700	Set of carburetor parts	1	10, 11, 17, 18	

N - Ignition system


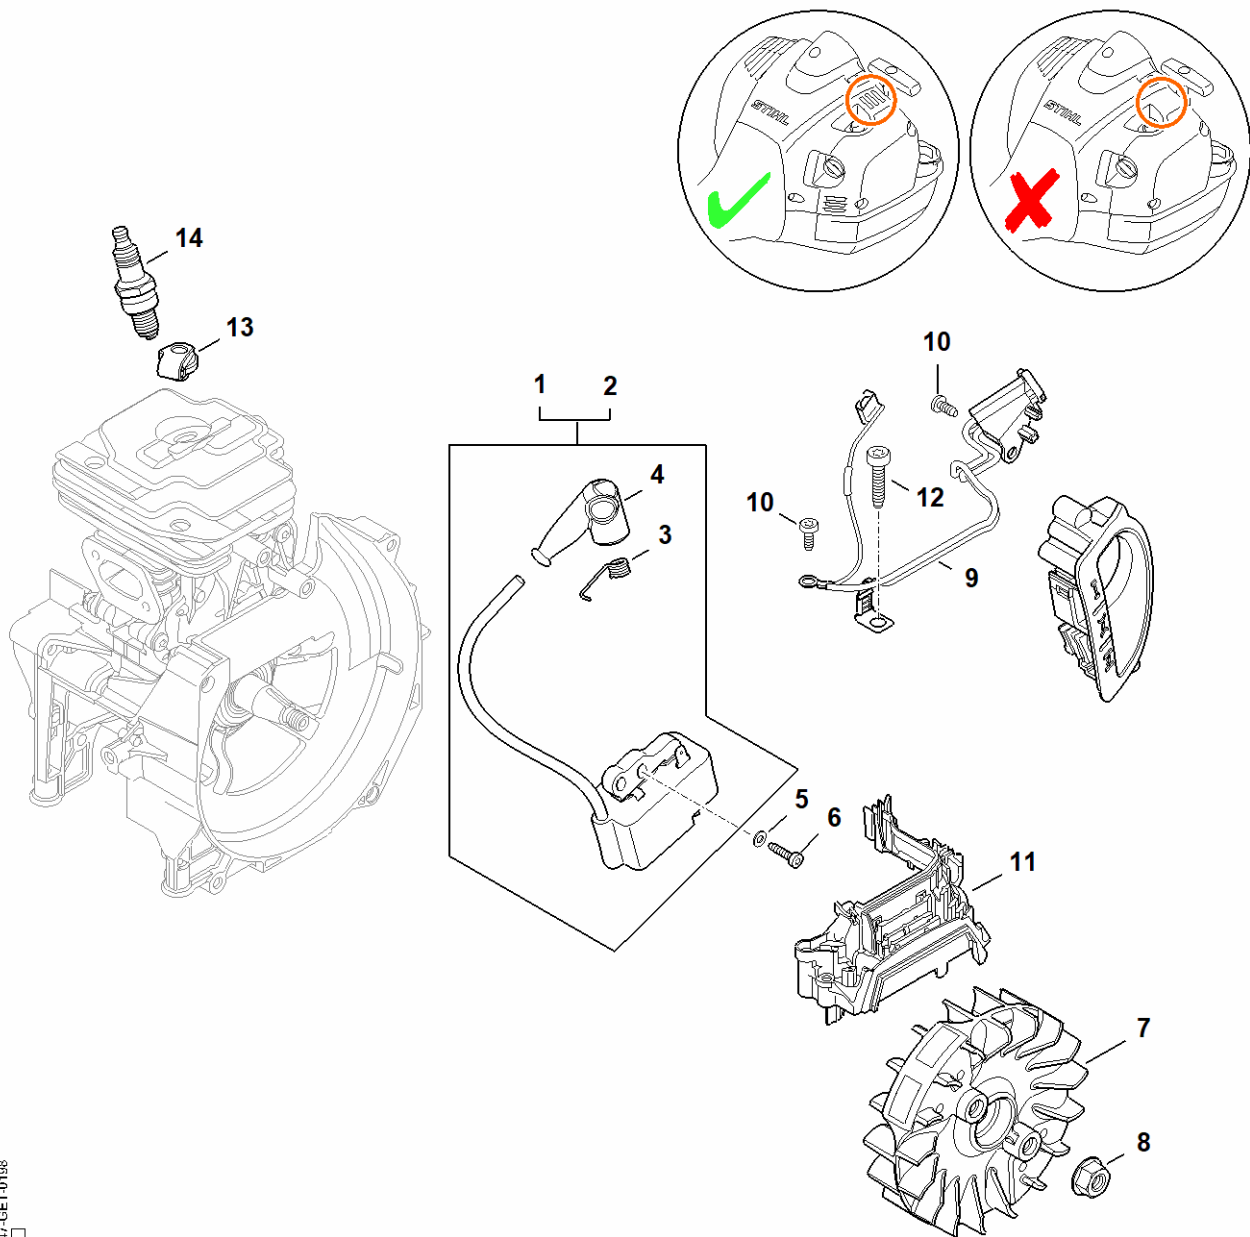


4147-GET-0158
K1

N - Ignition system

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
1	4147 400 1310	Ignition module	1	3, 4	
3	0000 998 0604	Spark plug contact spring	1		
4	0000 405 1005	Spark plug boot	1		
5	9291 021 0100	Washer 4.3	2		
6	9075 478 3019	Pan head self-tapping screw IS-D4x18	2		Binding thread
7	4147 400 1202	Flywheel	1		
8	0000 955 0802	Collar nut M8x1	1		
9	4147 440 3006	Wiring harness	1		
10	9074 478 2970	Pan head self-tapping screw IS-P4x10	2		
11	4147 448 1207	Lead retainer	1		
12	9075 478 4159	Pan head self-tapping screw IS-D5x24	2		Binding thread
13	4147 448 1202	Lead retainer	1		
14	0000 400 7011	Spark plug NGK CMR6H	1		
14	0000 400 7025	Spark plug STIHL ZK C 10	1		
14	0000 400 7026	Spark plug STIHL ZK C 10, pack of 40	1		

M - Ignition system

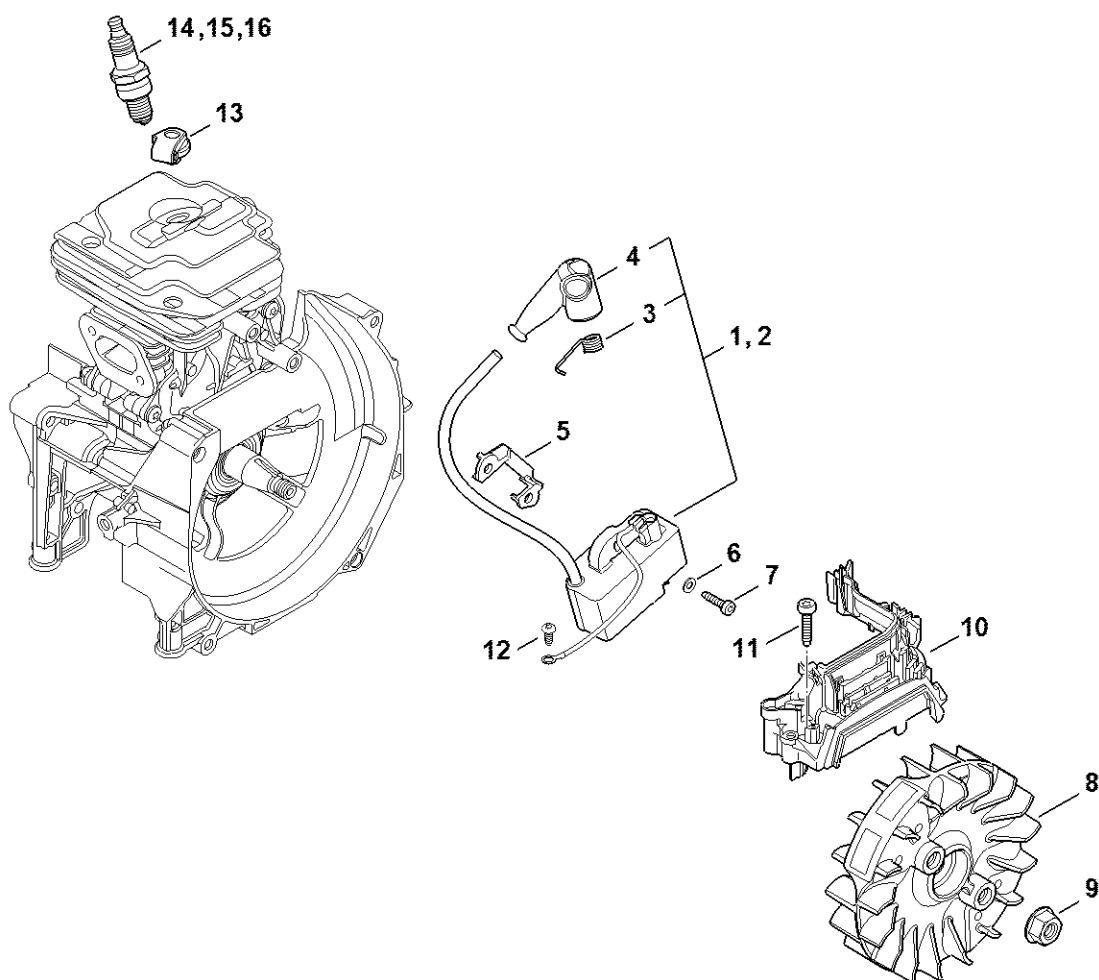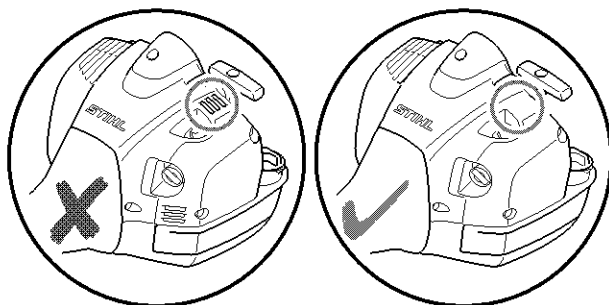


4147 GET 0199-A0

M - Ignition system

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
1	4147 400 1313	Ignition module	1	3, 4	
3	0000 998 0604	Spark plug contact spring	1		
4	0000 405 1005	Spark plug boot	1		
6	9291 021 0100	Washer 4.3	2		
7	9075 478 3019	Pan head self-tapping screw IS-D4x18	2		Binding thread
8	4147 400 1200	Flywheel	1		
9	0000 955 0802	Collar nut M8x1	1		
10	4147 448 1207	Lead retainer	1		
11	9075 478 4159	Pan head self-tapping screw IS-D5x24	2		Binding thread
12	9074 478 2970	Pan head self-tapping screw IS-P4x10	1		
13	4147 448 1202	Lead retainer	1		
14	0000 400 7011	Spark plug NGK CMR6H	1		
15	0000 400 7025	Spark plug STIHL ZK C 10	1		
16	0000 400 7026	Spark plug STIHL ZK C 10, pack of 40	1		

O - Clutch, Clutch housing

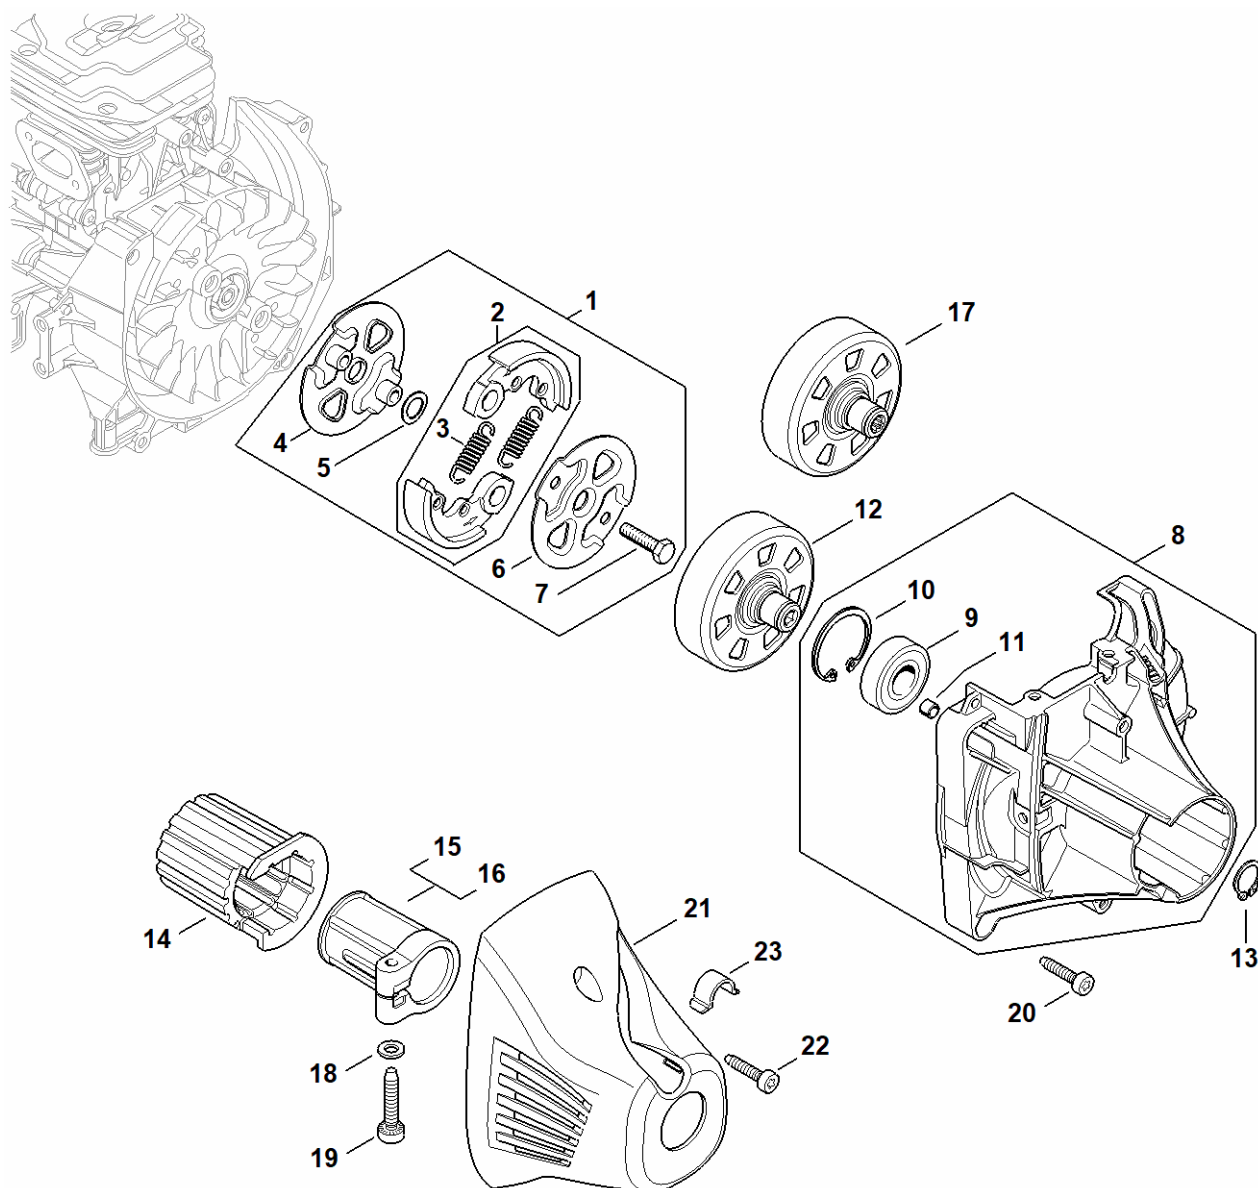


4147-GET-0151
K1

O - Clutch, Clutch housing

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
1	4147 160 2002	Clutch	1	2 - 7	
2	4147 160 2000	Clutch	1	3	
3	0000 997 5519	Tension spring	2		
4	4147 160 3000	Cover washer	1		
5	0000 958 1000	Washer 16x10x0.5	2		
6	4128 162 1000	Cover washer	1		
7	0000 951 0600	Hexagon head screw M6	2		
8	4147 160 0614	Clutch housing	1	9 - 11	
9	9503 003 7452	Grooved ball bearing 6202-2RS	1		
10	9456 621 3860	Circlip 35x1.5	1		
11	0000 988 8600	Sleeve	2		
12	4147 160 2903	Clutch drum	1		
13	9455 621 1520	Circlips DIN471-15x1	1		
14	4147 791 9310	Rubber insert	1		
15	4147 791 9411	Hose clamp	1		
18	9291 021 0140	Washer 6.4	1		
19	9075 478 4720	Pan head self-tapping screw IS-D6x35	1		Binding thread
20	9075 478 4159	Pan head self-tapping screw IS-D5x24	4		Binding thread
21	4147 161 1201	Cover	1		
22	9075 478 4159	Pan head self-tapping screw IS-D5x24	2		Binding thread
23	4128 792 2400	Lead retainer	1		

P - Drive tube assembly

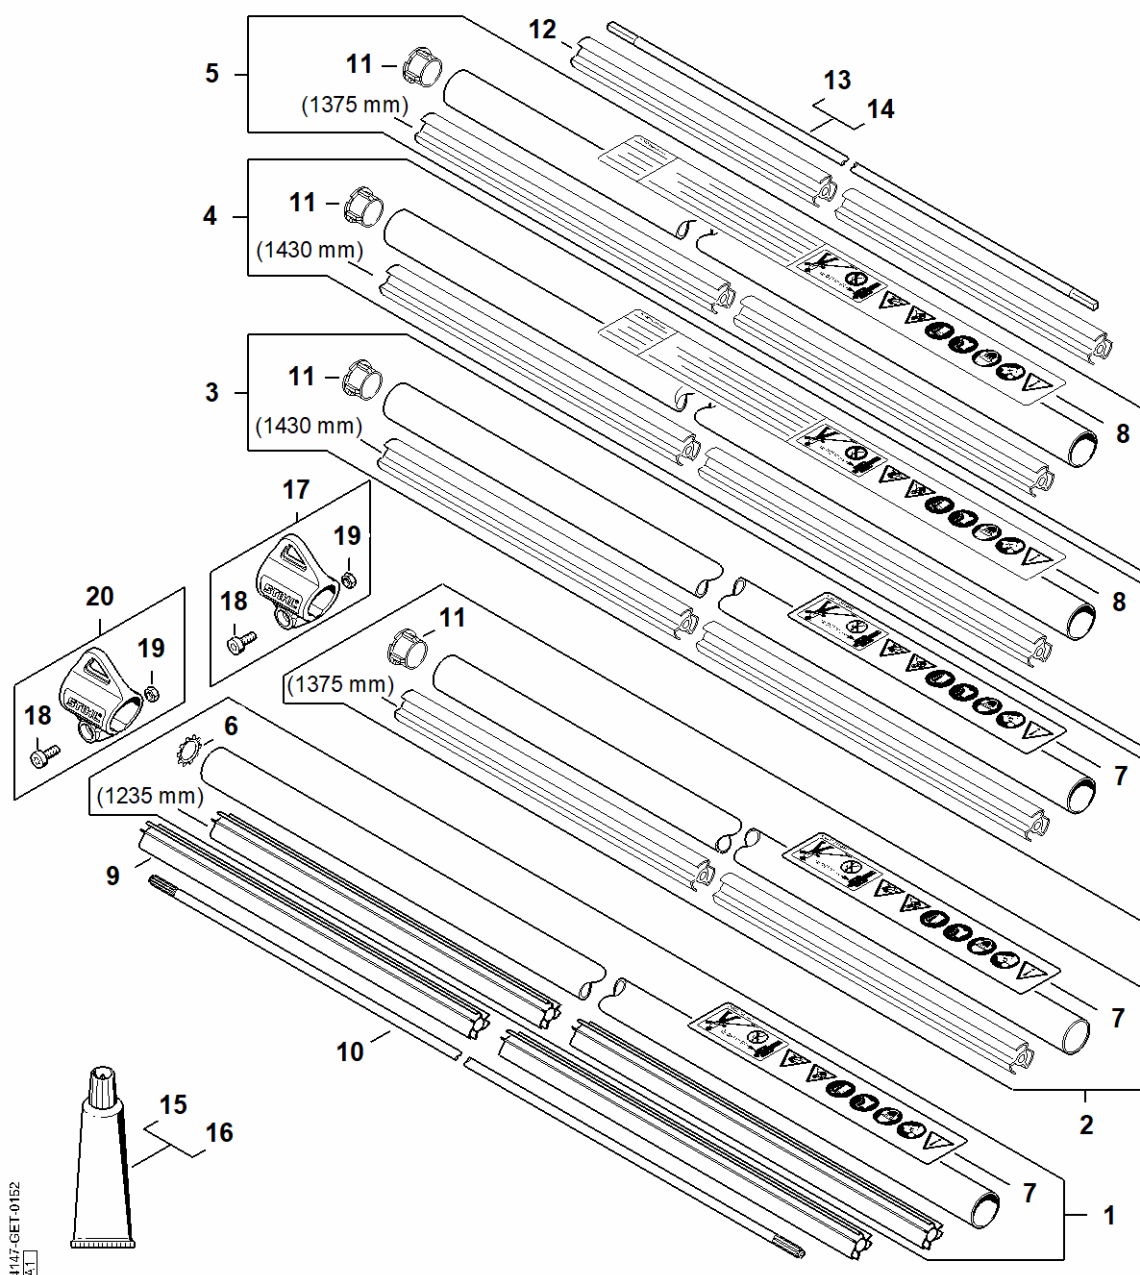


4147-GET-0152
K1

P - Drive tube assembly

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
2	4147 710 7115	Drive tube assembly Ø 25.4 mm x 1.496 m / 1" x 58 7/8"	1	7, 11	
7	0000 967 7253	Warning pictogram FS	1		
11	4137 711 2101	Plug	1		
12	4137 711 7300	Flexible liner 1455 mm	1		
14	4147 711 3211	Drive shaft	1		
15	0781 120 1109	Multi-purpose grease (tube 80 g)	1		
16	0781 120 1110	Multipurpose grease 225 g	1		
17	0000 790 8801	Loop	1	18, 19	
18	9022 341 0980	Pan head screw IS M5x16	1		Binding thread
19	9210 261 0700	Hexagon nut M5	1		

S - Bike handle FS 240

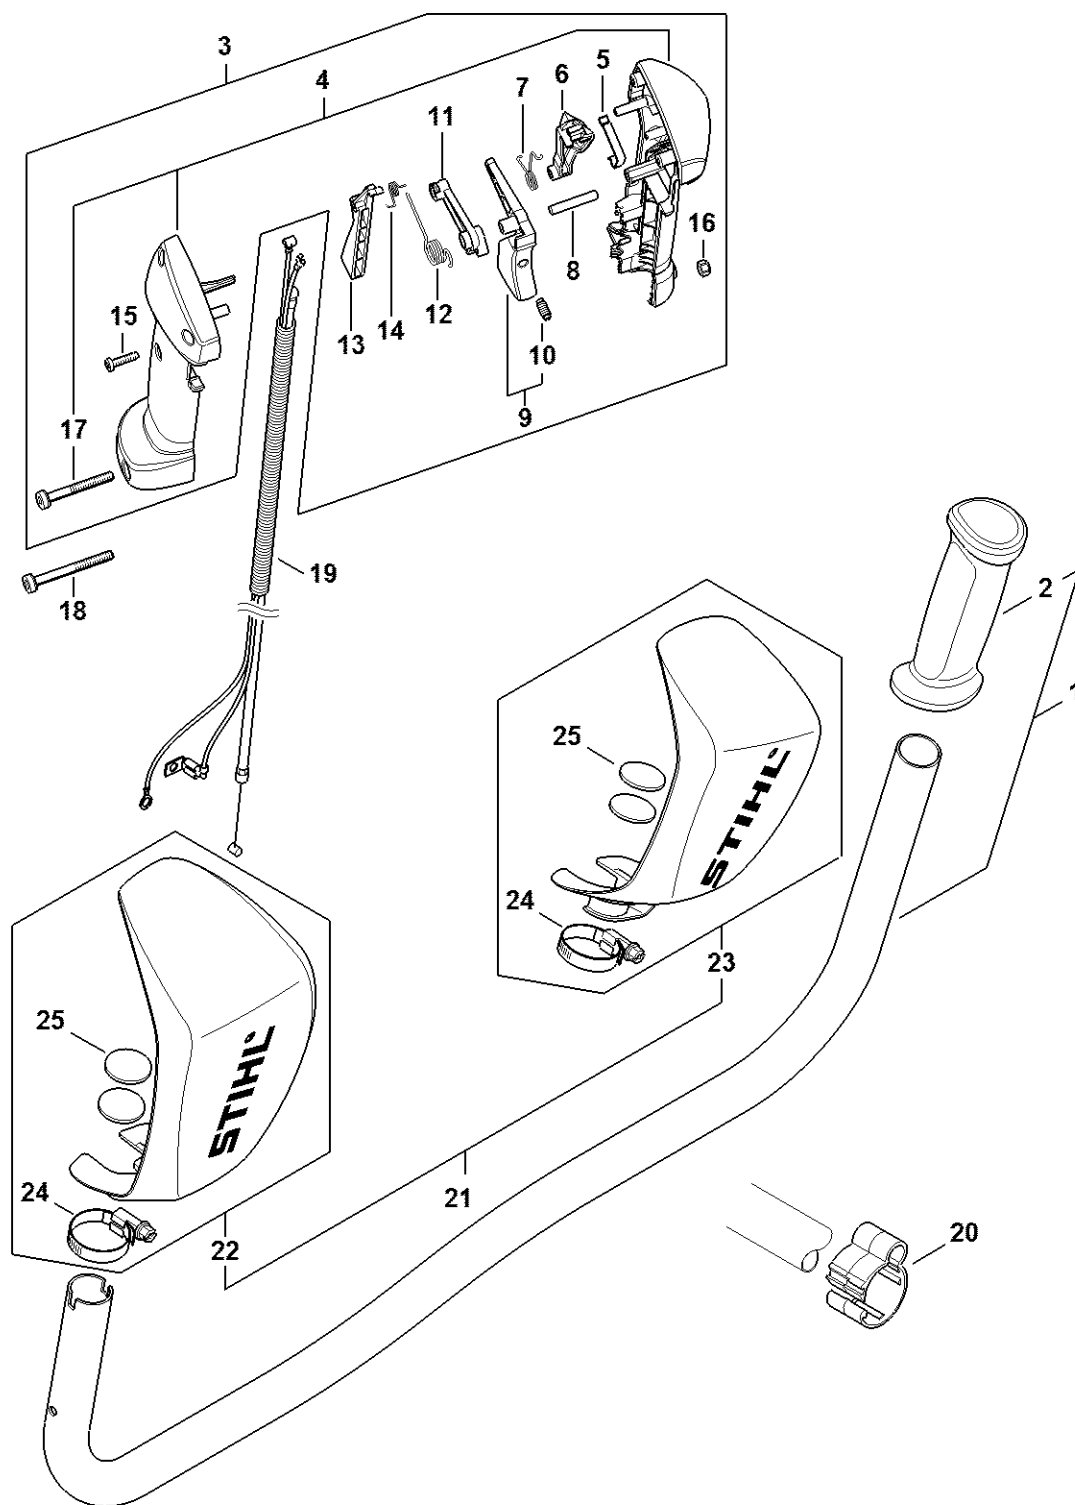


4147-GET-0035-A2

S - Bike handle FS 240

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
1	4147 790 1704	Handlebar	1	2	
2	4147 791 0302	Handle	1		
3	4147 790 1322	Control handle	1	4 - 17	
4	4147 790 0305	Handle	1	17	
5	4147 442 1600	Contact spring	1		
6	4147 182 2801	Lever	1		
7	4147 182 4502	Torsion spring	1		
8	9371 470 2683	Cylindrical pin 5x28	1		
9	4144 180 1501	Throttle trigger	1	10	
10	0000 953 0808	Stud	1		
11	4144 182 2801	Lever	1		
12	4144 182 4500	Torsion spring	1		
13	4144 182 0800	Lockout lever	1		
14	4128 182 4501	Torsion spring	1		
15	9074 478 3025	Pan head screw IS P4x16	3		
16	9214 320 0700	Lock nut M5	1		
17	9022 341 1090	Pan head screw IS M5x40x25	1		Binding thread
18	9022 341 1220	Spline screw IS-M5x48	1		Binding thread
19	4147 180 1119	Throttle cable	1		
20	0000 182 2100	Support Ø 25.4 mm / 1"	1		
21	4147 790 9102	Hand guard	1	22 - 25	
22	4147 790 9100	Hand guard	1	24, 25	
23	4147 790 9101	Hand guard	1	24, 25	
24	9771 021 2245	Hose clip	2		
25	4147 790 5001	Cling strip fastener	1		

U - Handlebar support

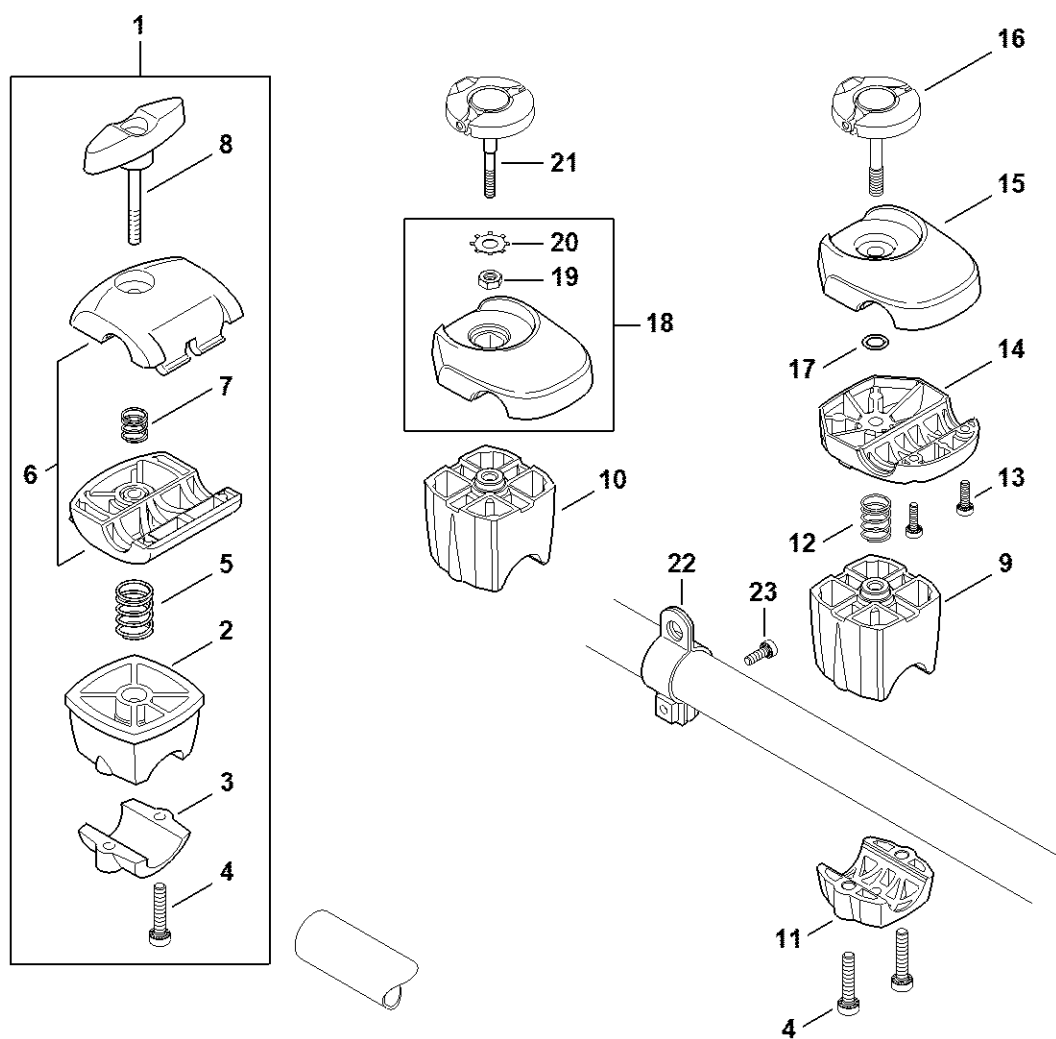


4147-GET-0154-A1

U - Handlebar support

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
1	4134 790 3200	Handlebar support	1	2 - 8	
2	4134 790 7600	Support	1		
3	4134 791 0900	Clamp	1		
4	9022 341 1370	Pan head screw IS M6x30	2		Binding thread
5	0000 997 1701	Compression spring	1		
6	4128 790 4800	Clamp	1		
7	0000 997 1304	Compression spring	1		
8	4128 790 7501	Tommy screw	1		

V - Gear head

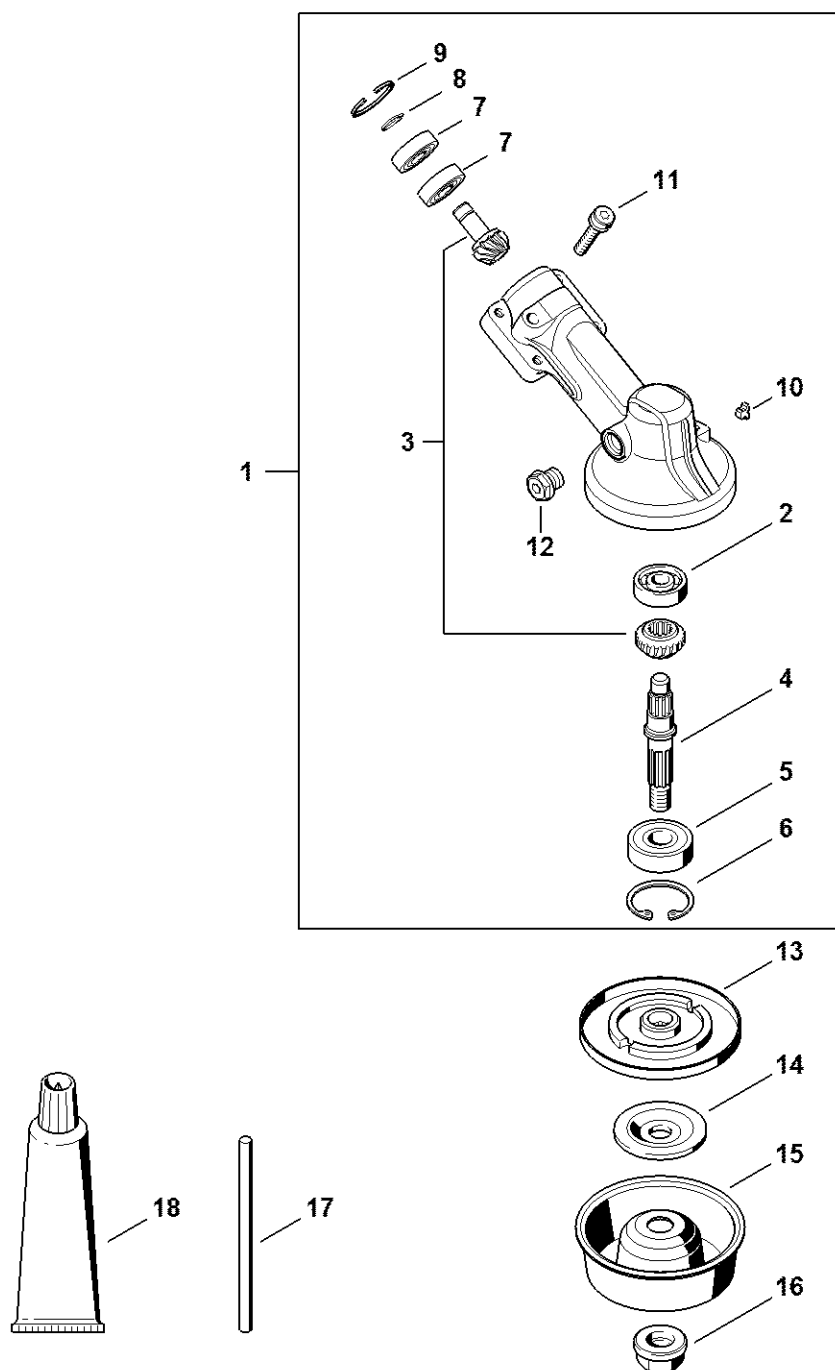


4147-GET-0047-A1

V - Gear head

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
1	4180 640 0114	Gear head	1	2 - 12	
2	9503 003 0060	Grooved ball bearing 629	1		
3	4180 640 7301	Set of pinions	1		
4	4180 642 0602	Drive shaft	1		
5	9503 003 6440	Grooved ball bearing 6201-2RS	1		
6	9456 621 3600	Circlips 32x1,2	1		
7	9503 003 9853	Grooved ball bearing 609-2Z	2		
8	9455 621 0750	Circlip 9x1	1		
9	9456 621 2660	Circlip 24x1.2	1		
10	4180 641 0800	Retaining plug	1		
11	9022 341 1371	Spline screw IS-M6x30	1		
12	4119 713 6500	Plug screw	1		
13	4137 710 3800	Thrust plate	1		
14	4130 713 1600	Thrust washer	1		
15	4126 713 3100	Rider plate	1		
16	4126 642 7600	Collar nut M10x1 l/h thread	1		
17	4130 893 7800	Locking pin	1		
18	0781 120 1117	Gearbox grease (80g tube)	1		

W - Gear head (23.2015)

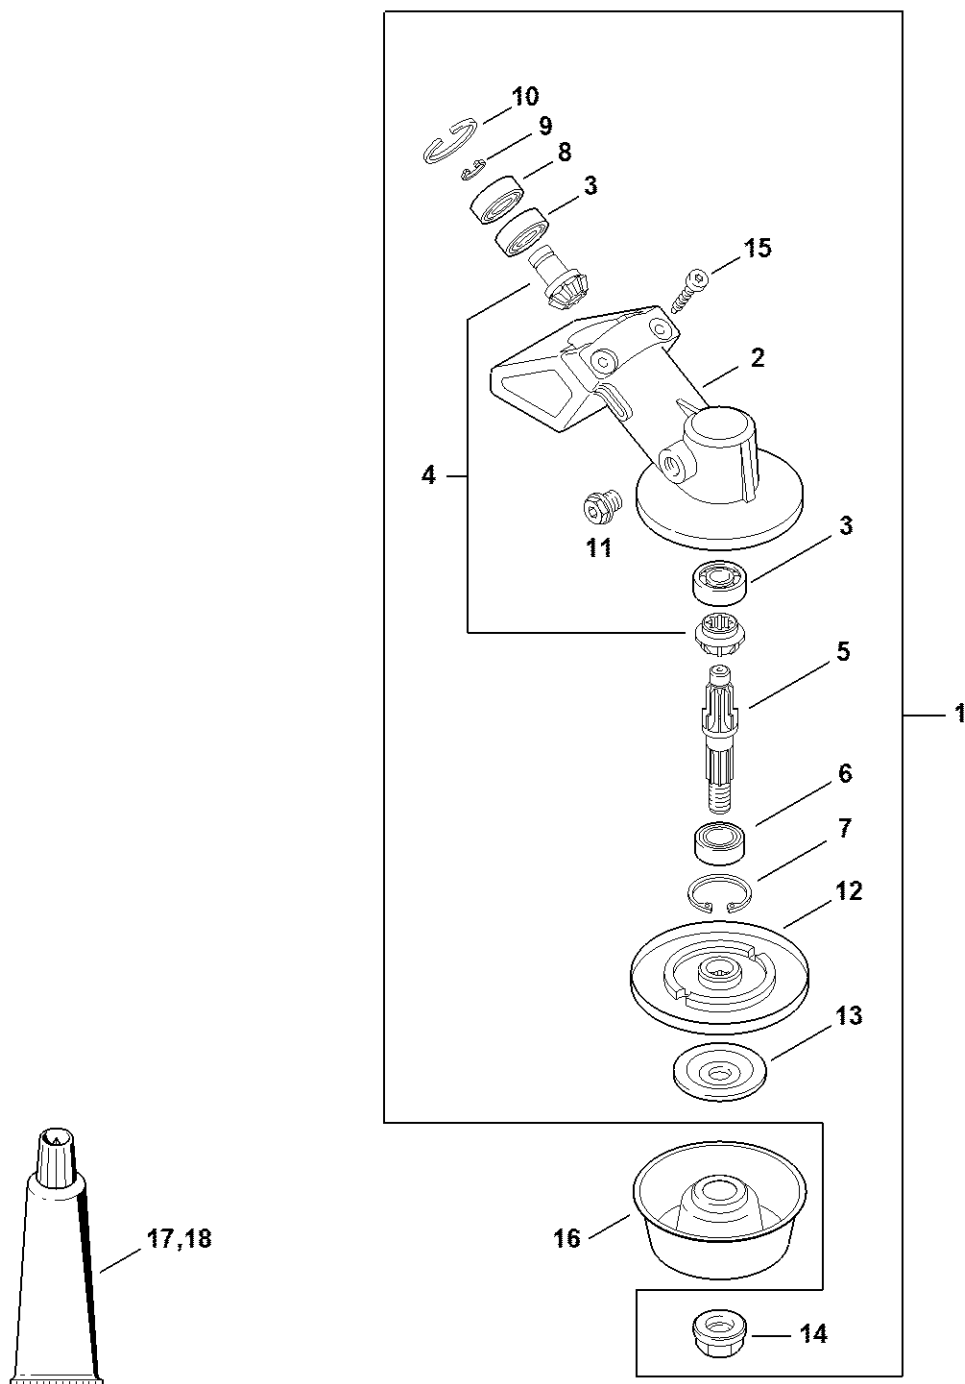


4147-GET-0007-A1

W - Gear head (23.2015)

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
1	4137 640 0100	Gearhead	1	2 - 15	
2	4130 641 0305	Gear housing	1		
3	9503 003 9850	Grooved ball bearing 609	2		
4	4130 640 7301	Set of pinions	1		
5	4130 642 0601	Drive shaft	1		
6	9503 003 5190	Grooved ball bearing 6001-2RS	1		
7	9456 621 3100	Circlip 28x1.2	1		
8	9503 003 9853	Grooved ball bearing 609-2Z	1		
9	9455 621 0750	Circlip 9x1	1		
10	9456 621 2660	Circlip 24x1.2	1		
11	4119 713 6500	Plug screw	1		
12	4137 710 3800	Thrust plate	1		
13	4130 713 1600	Thrust washer	1		
14	4126 642 7600	Collar nut M10x1 l/h thread	1		
15	9075 478 4159	Pan head self-tapping screw IS-D5x24	2		
16	4126 713 3100	Rider plate	1		
17	0781 120 1117	Gearbox grease (80g tube)	1		
18	0781 120 1118	Gear lubricant 225 g	1		

Y - Deflector

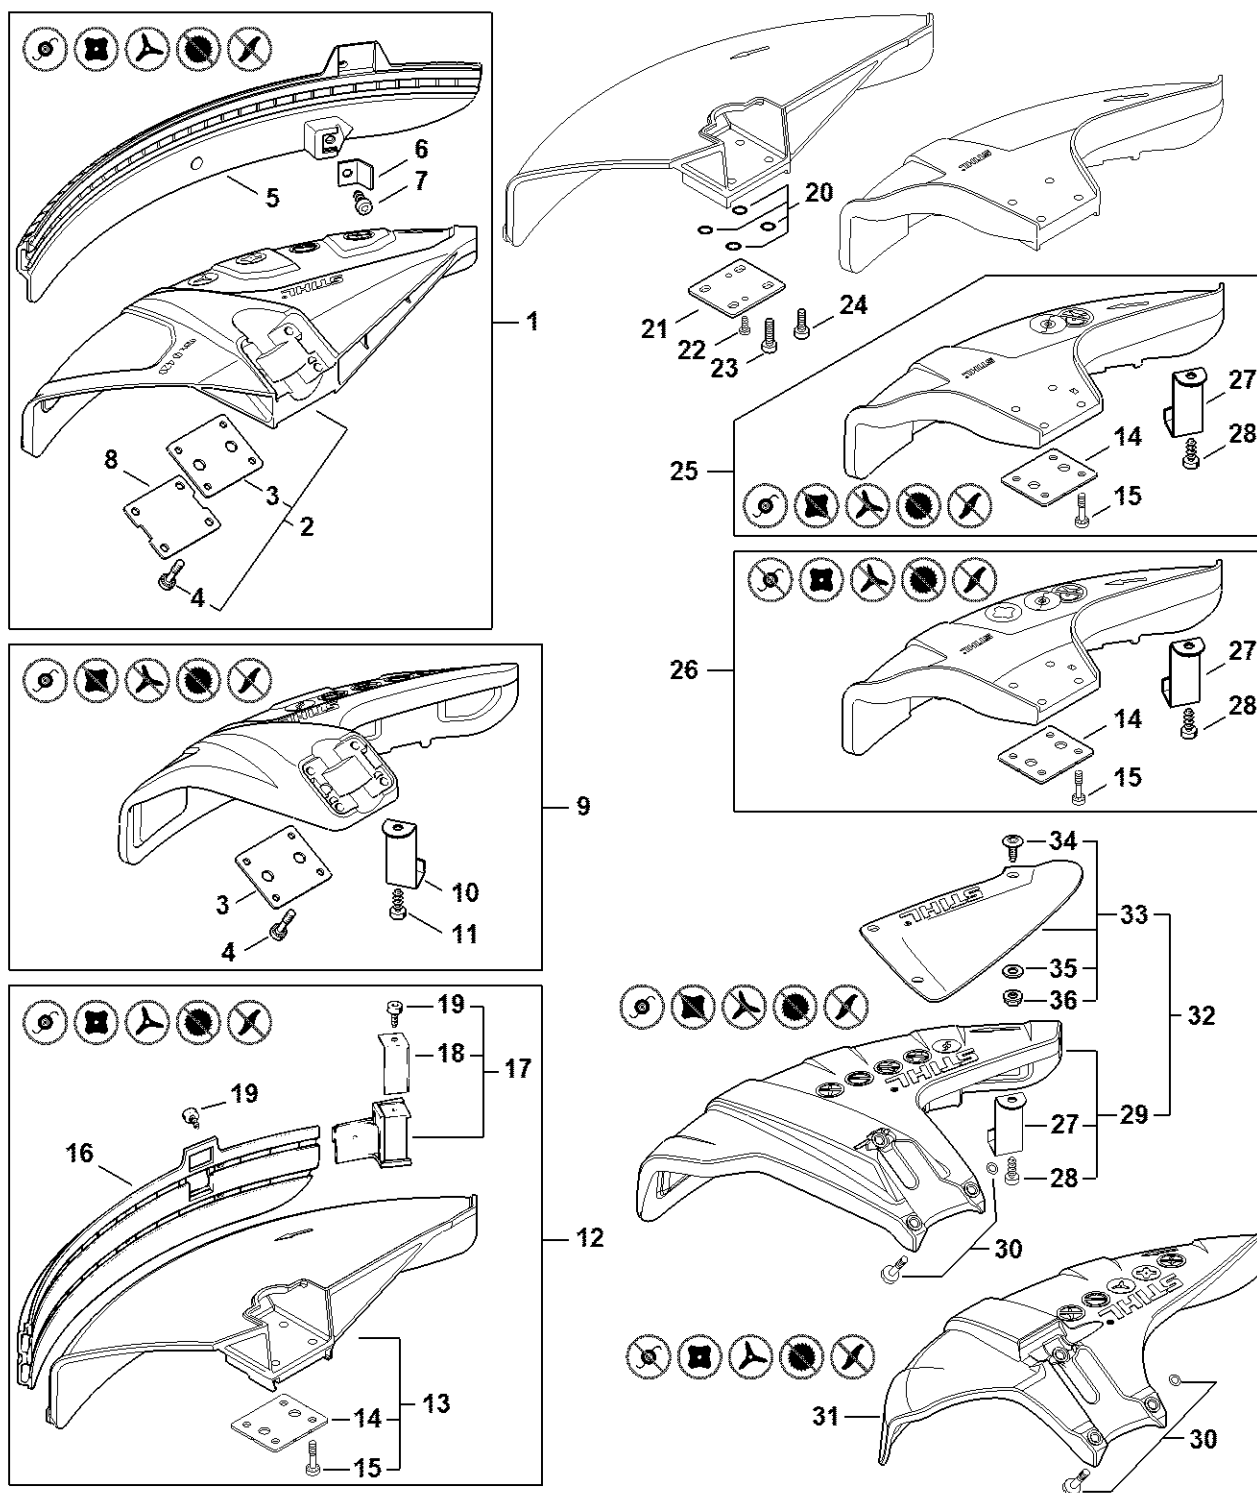


4147-GET-0053-A1

Y - Deflector

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
1	4180 007 1028	Deflector kit	1	2 - 8	
2	4180 710 8106	Deflector	1	3, 4	
3	4180 716 3100	Backing plate	1		
4	9022 373 1025	Spline screw IS-M5x23	4		
5	4180 716 3200	Skirt	1		
6	4180 713 4110	Blade	1		
7	9074 478 4405	Pan head screw IS P6x14	1		
9	4180 007 1030	Deflector kit	1	3, 4, 10, 11	
10	4133 713 4110	Blade	1		
11	9074 478 4405	Pan head screw IS P6x14	1		
12	4119 007 1027	Deflector kit	1	13 - 19	
13	4119 710 8103	Deflector	1	14, 15	
14	0000 716 3101	Backing plate	1		
15	9022 373 1025	Spline screw IS-M5x23	4		
16	4119 716 3203	Skirt	1		
17	4119 710 6000	Blade	1	18, 19	
18	4118 713 4105	Blade	1		
19	9074 478 4125	Pan head self-tapping screw IS-5x14	2		
20	0000 007 1300	Set of O-rings N 4x2-EPDM70	1		
21	0000 716 3100	Backing plate	1		
22	9074 478 2970	Pan head self-tapping screw IS-P4x10	2		
23	9022 371 1020	Pan head screw IS M5x20	4		Binding thread
24	9022 341 0980	Pan head screw IS M5x16	4		Binding thread
25	4133 007 1007	Deflector kit	1	14, 15, 27, 28	
27	4133 713 4110	Blade	1		
28	9074 478 4405	Pan head screw IS P6x14	1		

Z - Shredder deflector, Limit stop

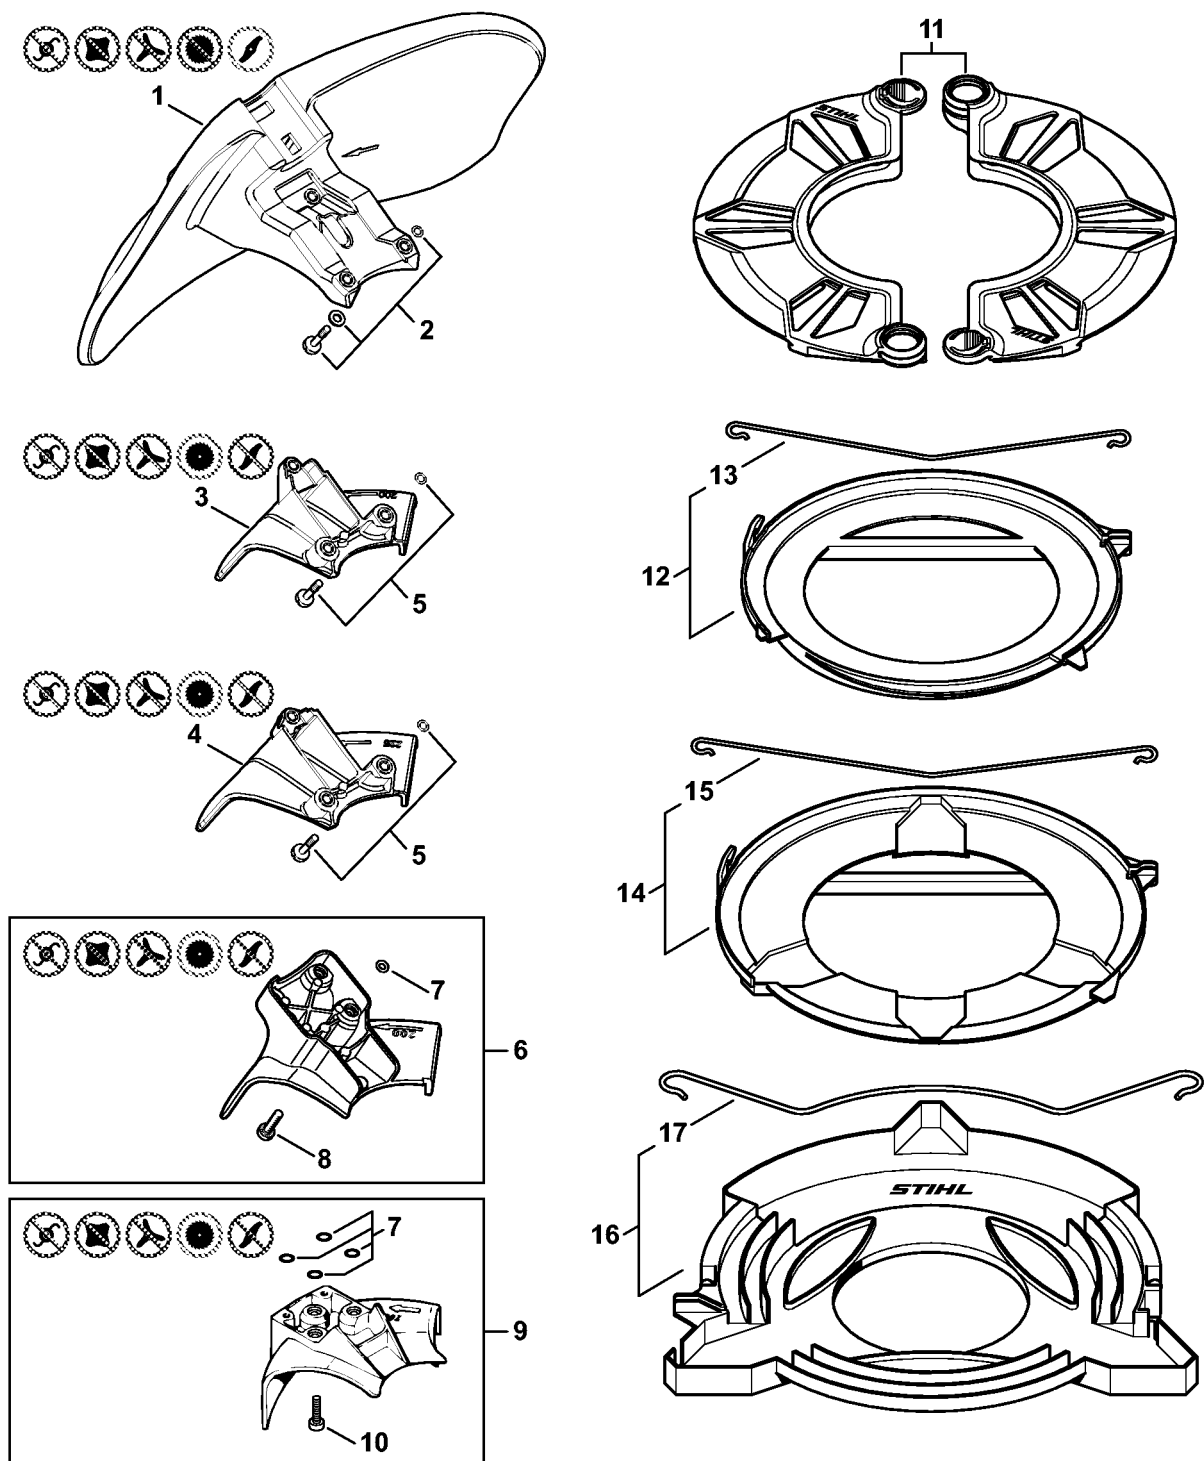


4147-GET-0054-A1

Z - Shredder deflector, Limit stop

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
6	4180 710 8202	Limit stop Ø 200 mm	1	7, 8	
7	0000 007 1300	Set of O-rings N 4x2-EPDM70	1		
8	9022 371 1020	Pan head screw IS M5x20	4		Binding thread
9	4117 710 8200	Limit stop Ø 200 mm	1	7, 10	
10	9022 371 1020	Pan head screw IS M5x20	3		Binding thread
11	0000 790 3901	Transport guard	1		
12	4119 790 3901	Transport guard Ø 225	1	13	
13	4119 792 4300	Clamping wire	1		
14	4119 790 3906	Transport guard Ø 260	1	15	
15	4119 792 4305	Clamping wire	1		
16	4116 790 3901	Transport guard Ø 350	1	17	
17	4116 792 4300	Clamping wire	1		

AA - Tools, Full harness

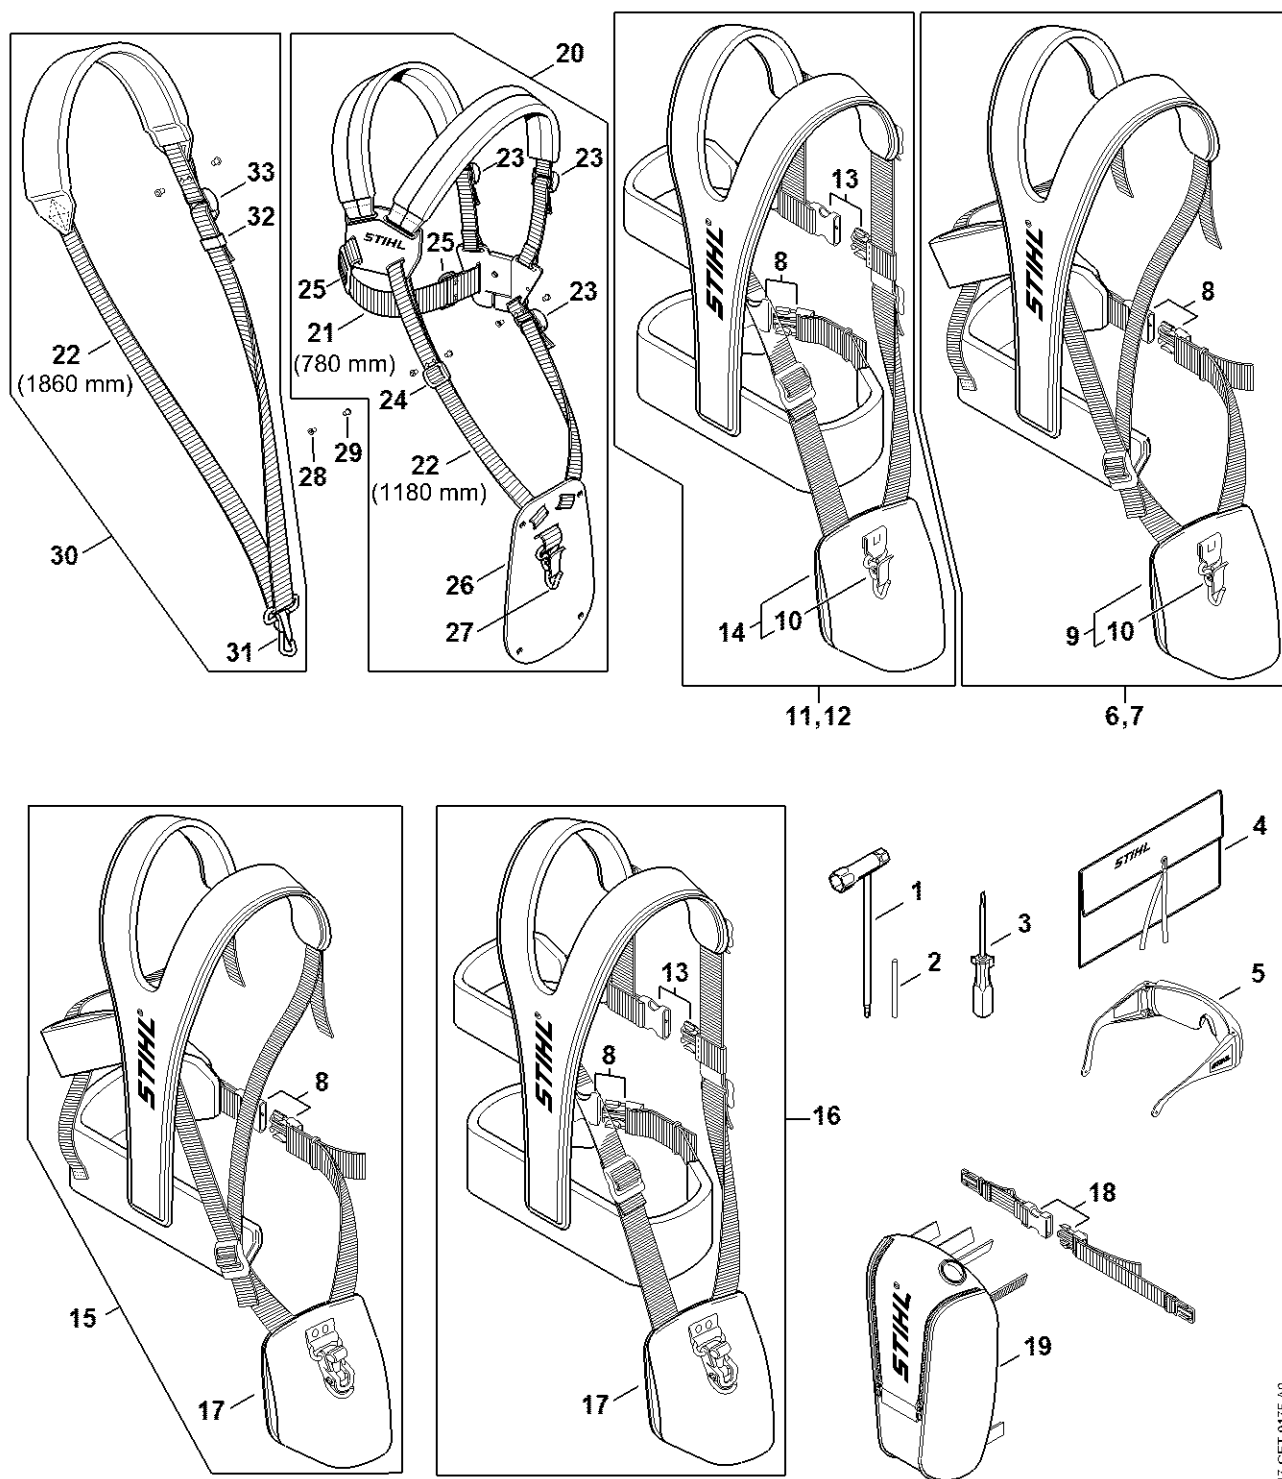


4147 GET 0175 A0

AA - Tools, Full harness

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
1	4180 890 3400	Combination wrench	1		
2	4130 893 7800	Locking pin	1		
3	0000 890 2300	Screwdriver	1		
4	0000 891 0810	Tool roll	1		
5	0000 884 0307	Safety glasses	1		
6	4147 710 9002	Universal harness ADVANCE	1	8 - 10	
7	4147 710 9004	Universal harness ADVANCE XXL	1	8 - 10	
8	4134 710 6401	Buckle	1		
9	4147 740 2500	Hip pad	1	10	
10	4147 710 6900	Spring safety hook	1		
11	4147 710 9003	Forestry harness ADVANCE	1	8, 10, 13, 14	
12	4147 710 9009	Forestry harness ADVANCE XXL	1	8, 10, 13, 14	
13	4147 710 6402	Buckle with strap	1		
14	4147 740 2501	Hip pad	1	10	
15	4147 710 9014	Universal harness ADVANCE PLUS	1	8, 17	
16	4147 710 9015	Forestry harness ADVANCE PLUS	1	8, 13, 17	
17	4147 740 2502	Hip pad	1		
18	0000 790 7700	Chest strap	1		
19	4147 881 5700	Tool backpack	1		
20	4119 710 9001	Full harness	1	21 - 27	
21	0000 930 2242	Webbing 38 mm x 5 m / 1.5x197"	1		
22	0000 930 2241	Webbing 25 mm x 10 m / 1" x 33'	1		
23	4203 792 7200	Slide	3		
24	4119 718 6300	Slide	1		
25	4119 718 6310	Slide	2		
26	4119 718 7400	Guard plate	1		
27	4147 710 6900	Spring safety hook	1		

AA - Tools, Full harness

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
28	9408 021 4530	Rivet shank 4x8x6	1		(quantity as required)
29	9409 021 4420	Rivet head 4x8	1		(quantity as required)
30	4119 710 9012	Harness	1	22, 31 - 33	
31	4119 710 6900	Spring safety hook	1		
32	4119 718 6320	Slide	1		
33	4203 792 7200	Slide	1		

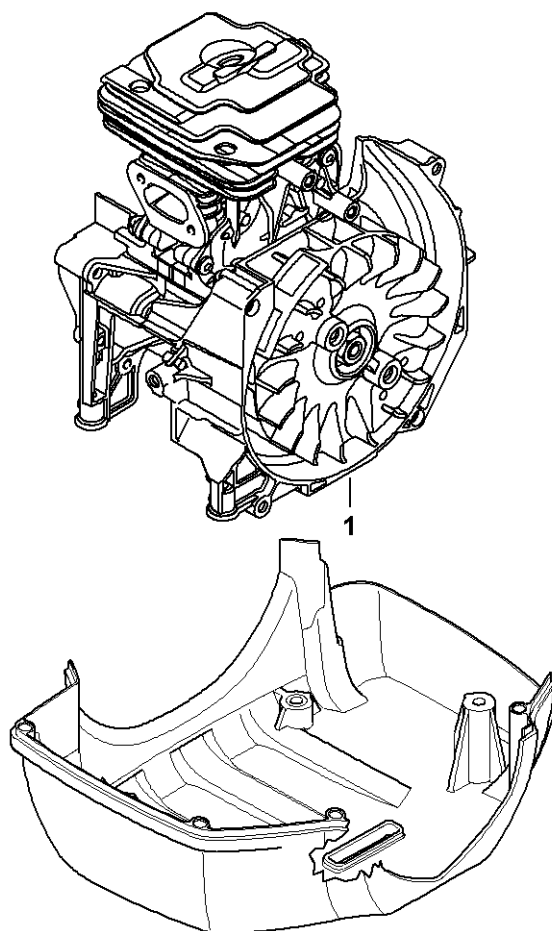

4147 GET 0104-A1

AB - Serial number

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
1		Position of serial number	1		